

Operating Instructions

Superior Calorific Value Corrector

Type	ERZ 9102 T ERZ 9102/4 T
------	----------------------------

Status: 06/01
Subject to change

CONTENTS

1	Introduction	3
2	Front Panel	4
3	Operation	5
4	ID Display / Device Data	7
5	Display Fault / Clear Fault Function	8
6	"TEST" Key Special Function: Freeze / Calibration During Operation	9
7	Summary of Coordinates	11
7.1	Coordinates from A to F	11
7.2	Coordinates from G to L	12
7.3	Coordinates from M to S	13
7.4	Coordinates from T to ZB	14
8	Summary of Device Functions to Be Called up with Function Keys	15
8.1	Column structure	15
8.2	Device-specific functions	16
8.2.1	Pressure at measuring conditions	16
8.2.2	Superior calorific value	17
8.2.3	Standard density (current input)	18
8.2.4	Temperature - velocity of sound measurement	19
8.2.5	Temperature at measuring conditions (PT100)	20
8.2.6	Temperature - density transducer	21
8.2.7	Density	22
8.2.8	Velocity of sound	23
8.2.9	Standard density (frequency input)	24
8.2.10	Volume flow rate at actual conditions	25
8.2.11	Energy flow rate, standard volume flow rate	26
8.2.12	Analysis	27
8.3	Outputs	28
8.3.1	Current outputs	28
8.3.2	Dispatcher outputs	29
8.3.3	Data interface A	30
8.3.4	Data interface B	31
8.4	Totalizers	32
8.5	Test	33
8.6	ID display	33
8.7	Mode	34
8.8	Clear / Fault	35
8.9	Error curve linearization via load points	35
8.10	ID input	36
8.11	Backup data (only for service)	36
Annex A	Survey of Equations Used	37
Annex B	Operating Examples	40
Annex C	Technical Data	44
Annex D	Pin Assignment Diagrams	45
Annex E	Fault List	49
Annex F	RMG Bus	53
Annex G	HART master card in the ERZ 9000 T	60

1 Introduction

The operating concept:

The operating concept has been chosen in such a way that the operator can easily use the device without wasting too much time reading a manual.

The function keys:

The most important data for the operator can be directly selected via function keys. There are function keys for:

- Pressure
- Temperature
- Analysis value
- Flow rates
- Totalizer readings
- Density
- Standard density
- Superior calorific value
- Outputs (currents, dispatcher, interfaces)
- Identification / device data
- Storing measured values (freeze) / calibration during operation.

The system of coordinates:

A system of coordinates makes it easy for the operator to access all configuration data, measured values and operands by means of a table.

The system of coordinates is based on 27 columns and 46 lines. Columns are marked **A** to **ZB**, and include **46** lines each. The operator can reach every value in this system of coordinates via cursor keys (arrows).


The display field:

An alphanumeric 2-line display with 20 characters per line enables data and measured values to be indicated together with their short designation and units. The luminescent display field in blue is easily readable even from a distance.

The types of devices:

Type of device	Description	Active columns of the system of coordinates												
		A	B	C	D	E	F	G	H	I	J	K	L	M-ZB
ERZ 9102 T	Superior calorific value corrector (density)		X	X	X		X	X	X	X	X	X		X
ERZ 9102/4 T	Superior calorific value corrector (density) with calculation of a reference volume correction factor via pressure and temperature in the background.	X	X	X	X	X	X	X	X	X	X	X	X	X

2 Front Panel

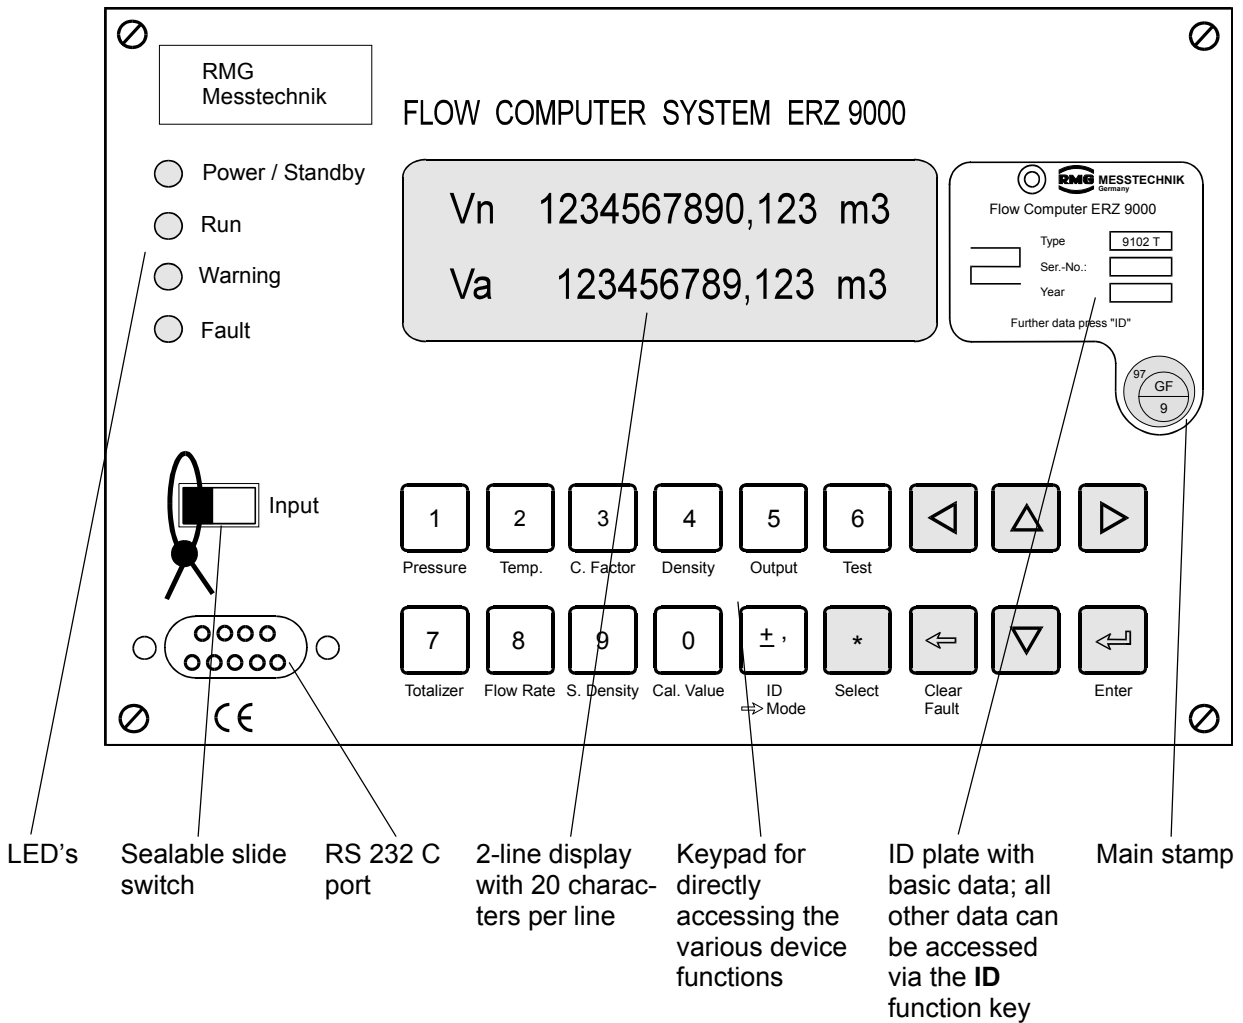

3 Operation

Description of function keys

Pressure	Indication of the PRESSURE and when pressing the $\uparrow\downarrow$ keys all pressure-related values.
Temp.	Indication of the TEMPERATURE and when pressing the $\uparrow\downarrow$ keys all temperature-related values.
C. Factor	Indication of the COMPRESSIBILITY FACTOR and the VOLUME CORRECTION FACTOR and when pressing the $\uparrow\downarrow$ keys all the other gas-analysis values.
Density	Indication of the DENSITY and when pressing the $\uparrow\downarrow$ keys all density-related values.
Output	Indication of all outputs of the device: ANALOG, DIGITAL or DATA INTERFACES.
Test	Activation of the FREEZE and CALIBRATION DURING OPERATION functions. This key initiates a dual function (see Chapter 6).
Totalizer	Indication of V_a and V_n totalizers.
Flow Rate	Indication of the VOLUME AT ACTUAL CONDITIONS and when pressing the $\uparrow\downarrow$ keys all values related to the volume at actual conditions.
S. Density	Indication of the STANDARD DENSITY and when pressing the $\uparrow\downarrow$ keys all values related to the standard density.
Cal. Value	Indication of the SUPERIOR CALORIFIC VALUE and when pressing the $\uparrow\downarrow$ keys all values related to the superior calorific value.
ID ⇒ Mode	Indication of DEVICE DATA and OPERATING MODES.

Special function keys

↑ ↓ ← →

Clear

Enter

Select

Arrow up / down



To scroll up or down by lines within a column. If you press ↑ at the beginning of a line of a column, you jump to the freeze table, namely to the last value of this table. Now you can select the fourth, third or second value by pressing ↑. If you press ↓ at the end of the freeze table, the display returns to the standard indication of the function key.

Arrow to the right / left



To scroll to the right or left by columns within a line. If you press ←, you can jump via the first column to the last column. If you press →, you can jump via the last column to the first column.

**The following applies to cursor keys in general:
Unoccupied line fields within a column and unoccupied columns within a line are automatically skipped. If the column jumped to is occupied but the line field is empty, the line number is automatically increased until an occupied field is found. When you jump to the next column, the initial line number is selected again.**

Clear / Fault



- a) To clear incorrect inputs in the programming mode. The state prior to inputting the first digit is restored.
- b) To indicate and clear fault messages.
- c) To close user inputs (locking by means of the code number).

Enter

To initiate and complete a data input. All data inputted are accepted.

Select



To switch over from short designations to coordinates and vice versa. Switching over is possible in almost all fields (also in the programming mode).

4 ID Display / Device Data

Press the **ID / MODE** key. (Example: ERZ 9102 T)

press ↓

ID line		1/24	
ra	10		80 kg/m3

etc.

ID line		2/24	
rn	0,65		1,30 kg/m3

← min. | max. range

The ID display comprises a field with a maximum of 30 data lines, a header line and a bottom line. The number of data lines depends on the chosen model. When you press the **ID / MODE** key, the header line overlays the upper part of the display field. The header line will always remain in the upper part of the display field as long as the ID mode is active. The first data line of the ID data field is shown in the lower part of the display field. You can now scroll in the ID data lines by pressing the ↓ or ↑ key. The bottom line appears at the end of the data field. The ID display of the ERZ 9102 T includes the following data, for example:

Header line	→	ID line	n/24
		ra	10,0 80 kg/m3
		rn	0,65 1,30 kg/m3
		cn	150 500 m/s
		Hs	7 14 kWh/m3
		Meter G	6500
		q	500 10000 m3/h
		M-Kv	600,315 l/m3
		ECL	None
ID contents	→	M-type	TM
		M-No.	22523
		qamin-HP	200 m3/h
		ramin-HP	40 kg/m3
		ramax-HP	80 kg/m3
		Gas type	Natural gas
		Hs type	PGC
		Hs No.	552345
		ra-type	DG08
		ra-No	572345
		rn-type	NDG08
		rn-No	582345
		cn-type	VOS07
		cn-No	592345
		Comp-No	502345
Bottom line	→	** End of ID **	

Programming the ID display

Set the switch to "Input", select ID and press the → key four times. The ZB column will appear with the heading "ID input". The size of the ZB column depends on the chosen model. Make your changes here, while the input switch is open. Data inputted are automatically transferred to the ID display.

Note: The input column (ZB) will only appear if the switch is in its "Input" position!

5 Display Fault / Clear Fault Function

Display fault

The occurrence of a fault is indicated by the **Fault** LED on the front panel of the device or by an isolated contact at the terminal block. The LED flashes if faults are pending. If faults are no longer pending, the LED turns to steady light.

To display fault texts, you must press the **CLEAR / FAULT** key. After you have pressed this key, the display field shows **Fault indication** and the bottom line shows the fault texts at 3-second intervals. All messages are consecutively shown in the display field. As long as the Fault LED flashes, there is still at least one fault pending. If the Fault LED shows steady light, all indicated fault messages are no longer valid and the device has returned to fault-free operation.

Clear fault

There are two operating modes for clearing fault messages: **DIRECT CLEARING** and **INDIRECT CLEARING**. You can select the desired operating mode under **FAULT-MOD** in the field Y 17.

- a) Direct clearing
In the fault indication mode you can clear fault messages directly via the **CLEAR / FAULT** key.
- b) Indirect clearing
You cannot clear fault messages unless you have selected the **CLEAR FAULT ?** field (Y5) using the **ENTER** key.

The time and date of the fault occurred are shown in the fields Y3 and Y4. If there is more than one fault pending, the time and date of the first fault occurred are shown.

The time and date of the last fault acknowledgment are shown in the field Y6.

Note on the SELECT key * in connection with the fault indication mode:

You are in the coordinate field and as soon as a fault message occurs you want to quickly switch over to the fault indication mode and then return to the same location in the coordinate field. To do this, you must press the **SELECT** key in the fault indication mode.

6 "TEST" Key Special Function: Freeze / Calibration During Operation

The **TEST** key comprises two functions:

1. Freeze function (storage of measured values and operands)
2. Calibration during operation (start / stop function of totalizers)

Freeze function

Manual freezing

If the freeze mode is set to manual, a freeze operation is performed every time you press the **TEST** key. The frozen values can be read in the columns A ... V 43, 44, 45, 46.

Example:

Press the **TEST** key. The display will show the totalizers for calibration during operation. At the same time, all freeze coordinates are written with the current values at this moment. Press the **FLOW RATE** key and the display will show the frozen value for the volume at actual conditions. The following is displayed for example:

Current value
Current value

qa	1622,74	m3/h
fm	450,34	Hz

press ↑ 3 times

Current value
Frozen value

qa	1622,74	m3/h
Fqa	1621,45	Hz

If you press the **TEST** key again, this will result in repeated freezing of current values.

Automatic freezing

In the automatic freeze mode, the desired parameters are preselected in the "Mode" column.

Example:

You want to freeze current values daily at 06:00:00 a.m. First input the code number to enable the change option for the appropriate fields.

Press the **MODE** key.
Press → once.

Current time

	Mode
Time:	13-25-43

press ↓ 4 times

Manual freezing

Mode
F-mod: Manual

Set the "F-mod" mode to daily freezing [Day(s)]:

Press the **ENTER** key.
Press the **MODE** key 3 times.

Daily freezing

Mode
F-mod: Day(s)

Press ↓ once

Start time

Mode
F-time: hh:mm:ss

Input the desired time for the first freeze operation.

Press ↓ once

Start date

Mode
F-date: dd:mm:yy

Input the desired date (no days of the past) for the first freeze operation.

Press ↓ once

Repetition rate

Mode
F-rep: xx

Input the desired repetition rate. For daily repetition, input "1"

Calibration during operation

Parallel to the totalizers for custody transfer metering, separate totalizers can be started or stopped via the **TEST** key. At the same time the totalizers are started, they are set to zero. In the coordinate field V5 a stopwatch is operated at the same time the **TEST** key is pressed. Designation: C-duration (duration of calibration during operation).

Attention! Each time the totalizers are started or stopped, a freeze operation of the appropriate fields is performed in the manual freeze mode. If the freeze mode is not set to "manual", pressing the **TEST** key will not have any effect on freezing.

7 Summary of Coordinates

7.1 Coordinates from A - F

	Active	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T
	Active	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T
		Pressure A / 01	Sup. Cal. Val. B / 02	S. Density C / 03	Temp.-VOS D / 04	Temperature E / 05	Temp.-Dens. F / 06
1	Meas. value 1	p	Hsnc	rnc	tcn	t	tra
2	Meas. value 2		Hsn	rn			
3	In / Out 1	mA	mA	mA	mA	Ohm	mA
4	In / Out 2						
5	Min. range	<i>p-min</i>	<i>Hsn-min</i>	<i>rn-min</i>	<i>tcn-min</i>	<i>t-min</i>	<i>tra-min</i>
6	Max. range	<i>p-max</i>	<i>Hsn-max</i>	<i>rn-max</i>	<i>tcn-max</i>	<i>t-max</i>	<i>tra-max</i>
7	Min. limit						
8	Max. limit						
9	Default value	<i>p-default</i>	<i>Hsn-default</i>	<i>rn-default</i>	<i>tcn-default</i>	<i>t-default</i>	<i>tra-default</i>
10	Jump	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>
11	Reference	<i>p-standard</i>				<i>t-standard</i>	
12	Corr. factor	Input	Input	Input	Input	Input	Input
13	Averaging						
14	Min. contact	<i>p<</i>	<i>Hsn<</i>	<i>rn<</i>	<i>tcn<</i>	<i>t<</i>	<i>tra<</i>
15	Max. contact	<i>p></i>	<i>Hsn></i>	<i>rn></i>	<i>tcn></i>	<i>t></i>	<i>tra></i>
16							
17	Mode 1	<i>off / 0- / 4-</i>	<i>off / 0- / 4-</i>	<i>off / 0- / 4-</i>	<i>off / 0- / 4- def.</i>	<i>off / on</i>	<i>off / on</i>
18	Mode 2	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>
19	Mode 3	<i>pabs/pgauge</i>					
20	Last meas. val		Hsn-h	rn-h			
21	Specif. value		<i>Hsn-s</i>	<i>rn-s</i>			
22	Delta limit		<i>delta (%) max</i>	<i>delta (%) max</i>			
23	Delta act. val.		<i>delta (%)</i>	<i>delta (%)</i>			
24	Meas. value		Hsn calib.	rn calib.			
25	Cor. meas. val						
26	Corr. factor		Corr. val. abs	Corr. val. abs			
27	Constants						
28	Constants						
29	Constants						
30	Constants						
31	Constants						
32	Constants						
33	Constants						
34	Constants						
35	Constants						
36	Constants						
37	Special						
38	Special						
39	Special						
40	Special						
41	Special						
42	Special						
43	Freeze / CDO	1st value	1st value	1st value	1st value	1st value	1st value
44	Freeze / CDO		2nd value	2nd value			
45	Freeze / CDO	3rd value	3rd value	3rd value	3rd value	3rd value	3rd value
46	Freeze / CDO						

Locked via calibration switch (E)

Locked via code number (B)

No locking (A)

<i>Italic</i>
<i>Italic</i>

7.2 Coordinates from G - L

	Active	9102 T	9102 T	9102 T	9102 T	9102 T	
	Active	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T
		Density	VOS	S. Density	Flow Rate 1	Flow Rate 2	Analysis
		G / 07	H / 08	I / 09	J / 10	K / 11	L / 12
1	Meas. value 1	rac	cn	rnc	qa	qe	VCF
2	Meas. value 2	ra	G	m	qac	qn	K
3	In / Out 1	Hz	Hz	fm (Hz)	fm (Hz)	VCF (ra)	Hsn,G
4	In / Out 2			fr (Hz)	fr (Hz)		rd,G
5	Min. range	<i>ra-min</i>	<i>cn-min</i>	<i>rn-min</i>	<i>qa-min</i>		
6	Max. range	<i>ra-max</i>	<i>cn-max</i>	<i>rn-max</i>	<i>qa-max</i>		
7	Min. limit						
8	Max. limit						
9	Default value	<i>ra-default</i>	<i>G-default</i>	<i>rn-default</i>	<i>Difference (%)</i>		<i>K-default</i>
10	Jump	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>	<i>delta (%)</i>		
11	Reference						TB
12	Corr.-factor						
13	Averaging		<i>Input</i>		<i>Input</i>	<i>Input</i>	<i>Input</i>
14	Min. contact	<i>ra<</i>	<i>cn<</i>	<i>rn<</i>	<i>qa<</i>	<i>qn<</i>	
15	Max. contact	<i>ra></i>	<i>cn></i>	<i>rn></i>	<i>qa></i>	<i>qn></i>	
16						<i>qe<</i>	
17	Mode 1	<i>off / on</i>	<i>off / on / def.</i>	<i>off / 1f / 2f</i>	<i>off / on</i>	<i>qe></i>	<i>GERG / K=c</i>
18	Mode 2	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>Meas. / DF val.</i>	<i>1/ 1:1 / x:y</i>		
19	Mode 3	<i>VOS-corr/w/o</i>	<i>off/RG/KB/TC</i>		<i>off / corr.</i>		rncalc
20	Last meas. val		cn-h	rn-h			CO2calc
21	Specif. value			<i>rn-s</i>			H2calc
22	Delta limit	<i>delta (%)</i>		<i>delta (%)</i>	<i>delta Kvc (%)</i>		<i>delta (%)</i>
23	Delta act. val.			delta (%)	Kvc (%)		delta (%)
24	Meas. value			rn calib.			ra-calc
25	Cor meas. val				Kvc		
26	Corr. factor			<i>Corr. val. abs</i>	<i>Kv</i>		
27	Constants	<i>K0</i>	<i>KA</i>	<i>KK</i>	<i>Meas. wheel</i>		<i>CO2-2</i>
28	Constants	<i>K1</i>	<i>KB</i>	<i>KM</i>	<i>Ref. wheel</i>		<i>H2-2</i>
29	Constants	<i>K2</i>	<i>LB</i>	<i>KR</i>	<i>Missing puls.</i>		<i>rn-2</i>
30	Constants	<i>K4</i>	<i>LR</i>	<i>KC</i>	<i>Ref. pulses</i>		<i>Hsn-2</i>
31	Constants	<i>K5</i>			<i>Startup puls.</i>		<i>CO2-1</i>
32	Constants				<i>f<L</i>		<i>H2-1</i>
33	Constants		<i>t-cal</i>		<i>t<qa-min</i>		<i>rn-1</i>
34	Constants		<i>cn-cal</i>		<i>A -2</i>		<i>Hsn-1</i>
35	Constants		<i>t RG</i>		<i>A -1</i>		
36	Constants		<i>Hs RG</i>		<i>A 0</i>		
37	Special		<i>t select</i>		<i>A 1</i>		
38	Special		<i>Hs select</i>		<i>A 2</i>		
39	Special				qa peak	qn peak	
40	Special				Date / Time	Date / Time	Zn
41	Special					qe peak	Z
42	Special					Date / Time	
43	Freeze / CDO	1st value	1st value	1st value	1st value	1st value	1st value
44	Freeze / CDO	2nd value	2nd value	2nd value	2nd value	2nd value	2nd value
45	Freeze / CDO	3rd value	3rd value	3rd value	3rd value	3rd value	
46	Freeze / CDO			4th value	4th value		

Locked via calibration switch (E)

Locked via code number (B)

No locking (A)

<i>Italic</i>
<i>Italic</i>

7.3 Coordinates from M - S

	Active	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T
	Active	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T
		Analog 1	Analog 2	Analog 3	Analog 4	Digital 1	Digital 2	Data A
		M / 13	N / 14	O / 15	P / 16	Q / 17	R / 18	S / 19
1	Special	Phys. value	Phys. value	Phys. value	Phys. value	Designation	Designation	Data 1 / Front
2	Special	-	-	-	-			Mode 1
3	On / Off 1	I 1 (mA)	I 2 (mA)	I 3 (mA)	I 4 (mA)			Mode 2
4	On / Off 2	-	-	-	-			Baud rate
5	Min. range	Phys. value	Phys. value	Phys. value	Phys. value			
6	Max. range	Phys. value	Phys. value	Phys. value	Phys. value			
7	Special	-	-	-	-			
8	Special	-	-	-	-			
9	Special	Calib curr.	Calib curr.	Calib curr.	Calib curr.	50...300 ms	50...300 ms	Data 2 / C1
10	Special	-	-	-	-			Mode 1
11	Special	Selection	Selection	Selection	Selection	Selection	Selection	Mode 2
12	Special	Input	Input	Input	Input			Baud rate
13	Special	Input	Input	Input	Input			
14	Special							
15	Special							
16	Special							
17	Special	off / 0- /4- / CC	off / 0- /4- / CC	off / 0- /4- / CC	off / 0- /4- / CC	off / on	off / on	Data 3 / C3
18	Special					-	-	Mode 1
19	Special							Mode 2
20	Special							Baud rate
21	Special							Stop bit
22	Special							Parity
23	Special							
24	Special							
25	Special							Data 4 / C4
26	Special							Mode 1
27	Special					Pulse val. 1	Pulse val. 2	Mode 2
28	Special							Baud rate
29	Special							Stop bit
30	Special							Parity
31	Special							RBS
32	Special							
33	Special							
34	Special							Data 5 / C5
35	Special							Mode 1
36	Special							Mode 2
37	Special							Baud rate
38	Special							Stop bit
39	Special							Parity
40	Special							
41	Special							
42	Special							
43	Freeze / CDO							
44	Freeze / CDO							
45	Freeze / CDO							
46	Freeze / CDO							

Locked via calibration switch (E)

Locked via code number (B)

No locking

<i>Italic</i>
<i>Italic</i>

7.4 Coordinates from T - ZB

	Active	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T	9102 T	9004 T
	Active	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9102/4 T	9104 T
		Data B	Totalizer	Test	ID	Mode	Fault	Load Point	ID	Backup
		T / 20	U / 21	V / 22	W / 23	X / 24	Y / 25	ZA / 26	ZB / 27	ZC / 28
1	Special	Data 6 / C2	Ve	CVe	The length of the ID display column depends on the chosen model (maximum length: 30 fields).	Designation	Designation	Heading	Heading	l1-In
2	Special	<i>Mode 1</i>	Vac	CVac		<i>Time</i>	Status	<i>LP 1</i>		l2-In
3	Special		Va	CVa		<i>Date</i>	Fault time	<i>E-LP 1</i>		l3-In
4	Special	<i>Baud rate</i>	Vn	CVn		<i>Code No.</i>	Fault date	<i>LP 2</i>		l4-In
5	Special	<i>Stop bit</i>	Ve dist.	C-duration		Operating hrs.	clear ?	<i>E-LP 2</i>		T1-In
6	Special	<i>Parity</i>	Vac dist.			<i>Freeze mode</i>	last clearing	<i>LP 3</i>		l5-In
7	Special	<i>DSfG addr. U:</i>	Va dist.			<i>Freeze time</i>	Def.wr:	<i>E-LP 3</i>		f1-In
8	Special	<i>Preset U:</i>	Vn dist.			<i>Freeze date</i>		<i>LP 4</i>		f2-In
9	Special	<i>S-addr.:</i>				<i>Freeze repet.</i>		<i>E-LP 4</i>		f3-In
10	Special	<i>S-preset:</i>				last freeze		<i>LP 5</i>		f4-In
11	Special	<i>DSfG addr. U:</i>				<i>Print mode 1</i>		<i>E-LP 5</i>		fm-In
12	Special	<i>Preset U:</i>				<i>Print mode 2</i>		<i>LP 6</i>		fv-In
13	Special	Event 1				<i>Print mode 3</i>		<i>E-LP 6</i>		DP-Ram
14	Special	Time 1				<i>Print start</i>		<i>LP 7</i>		110
15	Special	Event 2				<i>Print interval</i>		<i>E-LP 7</i>		2
16	Special	Time 2				<i>Revis. interval</i>		<i>LP 8</i>		Vac
17	Special	Event 3	<i>Tot. mode</i>			last print out	<i>Clearing mode</i>	<i>E-LP 8</i>		Vn
18	Special	Time 3	<i>Tot. 1 select</i>			<i>Limit contacts</i>		<i>LP 9</i>		Q
19	Special	Event 4	<i>Tot. 2 select</i>			<i>Display mode</i>		<i>E-LP 9</i>		Va
20	Special	Time 4	<i>Tot. 1 sf</i>			Comp. type	<i>rn mode</i>	<i>LP 10</i>		PGC 0
21	Special	Event 5	<i>Tot. 2 sf</i>			Version	<i>External mode</i>	<i>E-LP 10</i>		PGC 1
22	Special	Time 5				<i>Comp. No.</i>	<i>A/D corr.</i>	<i>LP 11</i>		PGC 2
23	Special	Event 6				<i>Comp. mode</i>	<i>2-Way?</i>	<i>E-LP 11</i>		PGC 3
24	Special	Time 6				<i>RTC corr</i>		<i>LP 12</i>		PGC 4
25	Special	Event 7	<i>Vac set</i>			<i>System freq. f-Vol</i>		<i>E-LP 12</i>		PGC 5
26	Special	Time 7	<i>Vn set</i>			<i>System freq. f-den</i>				PGC 6
27	Special	Event 8	<i>Ve set</i>			Lamp test bott.				PGC 7
28	Special	Time 8	<i>Va set</i>			Lamp test top				PGC 8
29	Special	Event 9	<i>VacD set</i>				<i>PGC Timeout</i>			PGC 9
30	Special	Time 9	<i>VnD set</i>							PGC 10
31	Special	Event 10	<i>VeD set</i>							PGC 11
32	Special	Time 10	<i>VaD set</i>							PGC 12
33	Special									PGC 13
34	Special	print format								PGC 14
35	Special	<i>Print Sel. 1</i>								PGC 15
36	Special	<i>Print Sel. 2</i>								PGC 16
37	Special	<i>Print Sel. 3</i>								PGC 17
38	Special	<i>Print Sel. 4</i>								PGC 18
39	Special	<i>Print Sel. 5</i>								PGC 19
40	Special	<i>Print Sel. 6</i>								PGC 20
41	Special	<i>Print Sel. 7</i>								PGC 21
42	Special	<i>Print Sel. 8</i>								PGC 22
43	Frz / CDO		FVe	FCVe dist.						PGC 23
44	Frz / CDO		FVac	FCVac dist.						PGC 24
45	Frz / CDO		FVa	FCVa dist.						PGC 25
46	Frz / CDO		FVn	FCVn dist.						PGC 26
47										PGC 27


The length of the ID input column depends on the chosen model

Locked via calibration switch (E)
 Locked via code number (B)
 No locking (A)

<i>Italic</i>
<i>Italic</i>

8. Summary of Device Functions to be Called up with Function Keys

8.1 Column Structur

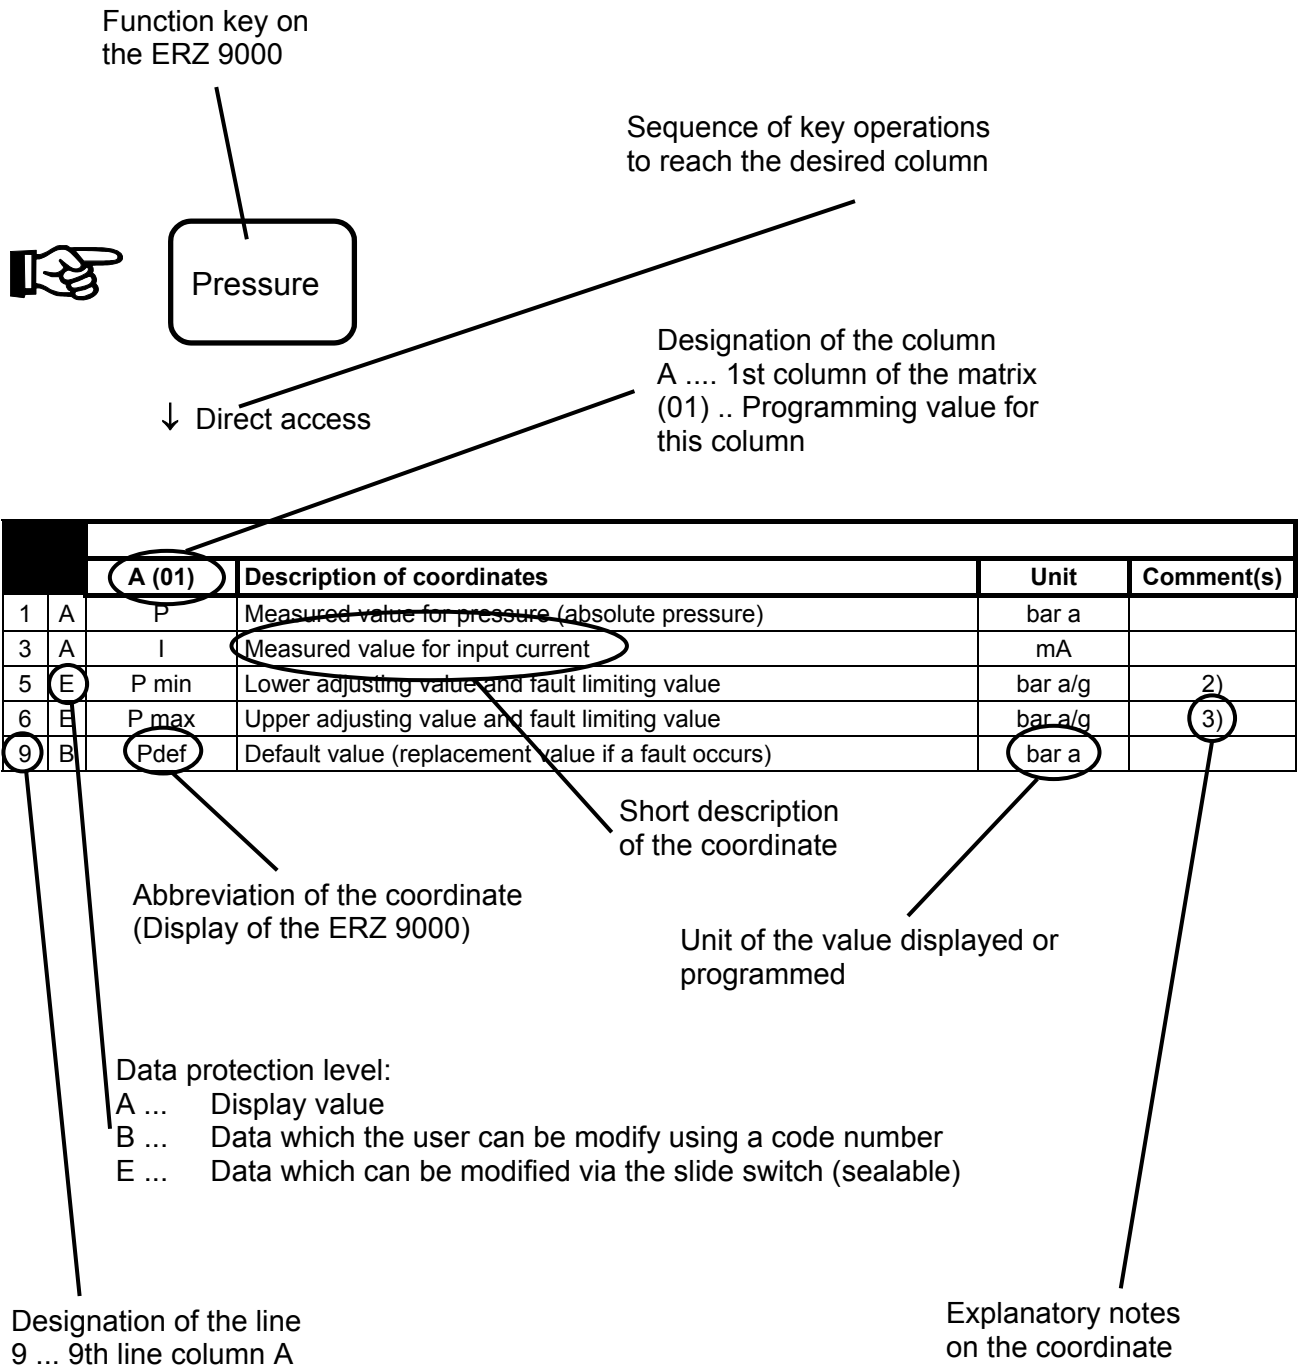

8.2 Device-specific functions

8.2.1 Pressure




↓ Direct access

		Not available with the ERZ 9102 T		
	A (01)	Description of coordinates	Unit	Comment(s)
1	A	P	Measured value for pressure (absolute pressure)	bara
3	A	I	Measured value for input current	mA
5	E	pmin	Lower adjusting value and fault limiting value	bara/g 2)
6	E	pmax	Upper adjusting value and fault limiting value	bara/g 3)
9	B	PDF	Default value (replacement value if a fault occurs)	bara
10	B	P-JP	Max. permissible jump from measured value to measured value	%
11	E	pn	Standard pressure (reference quantity)	bar 4)
12	E	p-c	Correction factor: balancing A/D converter offset	
14	B	p<	Contact: lower limit	bara
15	B	p>	Contact: upper limit	bara
17	E	p-mod1	Mode 1: current input = off (default value) / 0-20mA / 4-20mA	1)
18	E	p-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)	1)
19	E	p-mod3	Mode 3: pressure transmitter = P-abs / P-gauge	1)
43	A	Fp	Freeze: pressure (bar)	bara
45	A	FI	Freeze: input current	mA

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning 0 mA or 4 mA to the lower adjusting value.
- 3) Assigning 20 mA to the upper adjusting value.
- 4) Reference quantity for standard conditions of the country concerned.

8.2.2 Superior calorific value

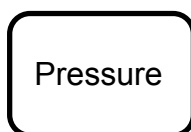

↓ Direct access

		B (02)	Description of coordinates	Unit	Comment(s)
1	A	GCVc	Corrected superior calorific value, calculated	MJ/m3	
2	A	GCV	Measured value for the superior calorific value	MJ/m3	
3	A	I	Measured value for input current	mA	
5	E	GCVmin	Lower adjusting value and fault limiting value	MJ/m3	2)
6	E	GCVmax	Upper adjusting value and fault limiting value	MJ/m3	3)
9	B	GCV-DF	Default value (replacement value if a fault occurs)		
10	B	GCV-JP	Max. permissible jump from measured value to measured value	%	
12	E	GCV-C	Correction factor: balancing A/D converter offset		
14	B	GCV<	Contact: lower limit	MJ/m3	
15	B	GCV>	Contact: upper limit	MJ/m3	
17	E	GCV-mod1	Mode 1: current input = off (default value) / 0-20mA / 4-20mA		1)
18	E	GCV-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)		1)
20	A	GCV-H	Hold value of the process gas for external calibration	MJ/m3	
21	E	GCV-S	Specified value of the test gas for external calibration	MJ/m3	
22	E	dGCV>L	Max. spec. / act. value deviation for external calibration	%	
23	A	dGCV	Spec. / act. value deviation for external calibration	%	
24	A	GCV-E	Measured value for the test gas for external calibration	MJ/m3	
26	E	CorrF	Correction value for the superior calorific value after external calibration	MJ/m3	
43	A	FGCVc	Freeze: corrected superior calorific value	MJ/m3	
44	A	FGCV	Freeze: superior calorific value	MJ/m3	
45	A	FGCVI	Freeze: input current	mA	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning 0 mA or 4 mA to the lower adjusting value.
- 3) Assigning 20 mA to the upper adjusting value.

8.2.3 Standard density (current input)



S. Density


↓ Direct access


	C (03)	Description of coordinates	Unit	Comment(s)	
1	A	rnk	Corrected standard density, calculated	kg/m ³	
2	A	rn	Measured value for standard density	kg/m ³	
3	A	I	Measured value for input current	mA	
5	E	rnmin	Lower adjusting value and fault limiting value	kg/m ³	2)
6	E	rnmax	Upper adjusting value and fault limiting value	kg/m ³	3)
9	B	rn-DF	Default value (replacement value if a fault occurs)		
10	B	rn-JP	Max. permissible jump from measured value to measured value	%	
12	E	rn-C	Correction factor: balancing A/D converter offset		
14	B	rn<	Contact: lower limit	kg/m ³	
15	B	rn>	Contact: upper limit	kg/m ³	
17	E	rn-mod1	Mode 1: current input = off (default value) / 0-20mA / 4-20mA / Databus		1)
18	E	rn-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)		1)
20	A	m-H	Hold value of the process gas for external calibration	kg/m ³	
21	E	m-S	Specified value of the test gas for external calibration	kg/m ³	
22	E	drn>L	Max. spec. / act. value deviation for external calibration	%	
23	A	drn	Spec. / act. value deviation for external calibration	%	
24	A	rn-E	Measured value for the test gas for external calibration	kg/m ³	
26	E	KorrW	Correction value for standard density after external calibration	kg/m ³	
43	A	Frnk	Freeze: corrected standard density	kg/m ³	
44	A	Frn	Freeze: standard density	kg/m ³	
45	A	FI	Freeze: input current	mA	

Depending on the set mode (standard density either as frequency or as current), you will be referred to the C column or the I column after selecting the standard density

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning 0 mA or 4 mA to the lower adjusting value.
- 3) Assigning 20 mA to the upper adjusting value.

8.2.4 Temperature-velocity of sound measurement

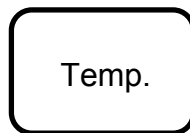

Indirect access by
pressing the  key

	D (04)	Description of coordinates	Unit	Comment(s)	
1	A	TS	Measured value for the temperature of the VOS transducer	°C	
3	A	I	Measured value for input current	mA	
5	E	TS<	Lower adjusting value and fault limiting value	°C	2)
6	E	TS>	Upper adjusting value and fault limiting value	°C	3)
9	B	TS-DF	Default value (replacement value if a fault occurs)	°C	
10	B	TS-JP	Max. permissible jump from measured value to measured value	%	
12	E	TS-C	Correction factor : balancing A/D converter offset		
14	B	TSmin	Contact: lower limit	°C	
15	B	TSmax	Contact: upper limit	°C	
17	E	TS-mod1	Mode 1: current input = off (default value) / 0-20mA / 4-20mA / Databus		1)
18	E	TS-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)		1)
43	A	FTS	Freeze: temperature (velocity of sound transducer)	°C	
45	A	FI	Freeze: input current	mA	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning 0 mA or 4 mA to the lower adjusting value.
- 3) Assigning 20 mA to the upper adjusting value.

8.2.5 Temperature at measuring conditions (PT 100)




Temp.


↓ Direct access

Not available with the ERZ 9102 T					
		E (05)	Description of coordinates	Unit	Comment(s)
1	A	T	Measured value for gas temperature	°C	
3	A	R	Measured value for input resistance	ohm	
5	E	Tmin	Lower fault limiting value	°C	2)
6	E	Tmax	Upper fault limiting value	°C	3)
9	B	TDF	Default value (replacement value if a fault occurs)	°C	
10	B	T-JP	Max. permissible jump from measured value to measured value	%	
11	E	tn	Standard temperature = 0 / 15 (reference quantity)	°C	1) 4)
12	E	T-C	Correction factor: balancing A/D converter offset		
14	B	T<	Contact: lower limit	°C	
15	B	T>	Contact: upper limit	°C	
17	E	t-mod1	Mode 1: resistance measurement off / on (PT 100)		1)
18	E	t-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)		1)
43	A	FT	Freeze: gas temperature	°C	
45	A	FR	Freeze: input resistance	ohm	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning to the lower adjusting value.
- 3) Assigning to the upper adjusting value.
- 4) Reference quantity for standard conditions of the country concerned.

8.2.6 Temperature-density transducer

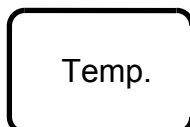

Indirect access by
pressing the  key

	F (06)	Description of coordinates	Unit	Comment(s)	
1	A	TD	Measured value for gas temperature at the density transducer	°C	
3	A	I	Measured value for input current	mA	
5	E	TDmin	Lower adjusting value and fault limiting value	°C	2)
6	E	TDmax	Upper adjusting value and fault limiting value	°C	3)
9	B	TD-DF	Default value (replacement value if a fault occurs)	°C	
10	B	TD-JP	Max. permissible jump from measured value to measured value	%	
12	E	TD-C	Correction factor : balancing A/D converter offset		
14	B	TD<	Contact: lower limit	°C	
15	B	TD>	Contact: upper limit	°C	
17	E	TD-mod1	Mode 1: resistance measurement off / on (PT 100)		1)
18	E	TD-mod2	Mode 2: if a fault occurs = default / measured value (last measurement)		1)
43	A	FTD	Freeze: gas temperature at the density transducer	°C	
45	A	FR	Freeze: input current	mA	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning to the lower limiting value.
- 3) Assigning to the upper limiting value.

8.2.7 Density



Density

↓ Direct access


	G (07)	Description of coordinates	Unit	Comment(s)	
1	A	rbk	Corrected density at actual conditions, calculated	kg/m3	
2	A	rb	Measured value for density at actual conditions	kg/m3	
3	A	f	Measured value for input frequency	Hz	
5	E	rbmin	Lower adjusting value and fault limiting value	kg/m3	2)
6	E	rbmax	Upper adjusting value and fault limiting value	kg/m3	3)
9	B	rb-DF	Default value (replacement value if a fault occurs)	kg/m3	
10	B	rb-JP	Max. permissible jump from measured value to measured value	%	
14	B	rb<	Contact: lower limit	kg/m3	
15	B	rb>	Contact: upper limit	kg/m3	
17	E	rb-mod1	Mode 1: frequency = off (default value) / on (measurement)		1)
18	E	rb-mod2	Mode 2: if a fault occurs=default / measured value (last measurement)		1)
19	E	rb-mod3	Mode 3: density at act. conditions w/o [corr] / w [corr]		1)
22	E	drb>L	Max. dev. of uncorr. dens. at act. cond. from corr. dens. at act. cond.	%	
23	A	drb	Dev. of uncorr. dens. at act. cond. from corr. dens. at act. cond.	%	
27	E	K0	Tuning fork constant K0		
28	E	K1	Tuning fork constant K1		
29	E	K2	Tuning fork constant K2		
30	E	K4	Param. for calc. the correction of density at act. cond. (standard = 1)		
31	E	K5	Param. for calc. the correction of density at act. cond. (standard = 0)		
43	A	Frbk	Freeze: corrected density at actual conditions	kg/m3	
44	A	Frb	Freeze: density at actual conditions	kg/m3	
45	A	Ff	Freeze: input frequency	Hz	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning to the lower adjusting value.
- 3) Assigning to the upper adjusting value.

8.2.8 Velocity of Sound



Density

Indirect access by
pressing the  key

	H (08)	Description of coordinates	Unit	Comment(s)
1	A	cn	m/s	
2	A	G		
3	A	f	Hz	
5	E	cnmin	m/s	2)
6	E	cnmax	m/s	3)
9	B	G-DF	m/s	
10	B	cn-JP	%	
13	B	cn-A		
14	B	cn<	m/s	
15	B	cn>	m/s	
17	E	cn-mod1		1)
18	E	cn-mod2		1)
19	E	cn-mod3		1)
20	A	cn-H	m/s	
27	E	KA		
28	E	KB		
29	E	LB		
30	E	LR		
33	E	Tcal	°C	
34	E	ccal	m/s	
35	E	T-RG	°C	
36	E	Ho-RG	MJ/m3	
37	E	T-Sel		1) 4.1)
38	E	Ho-Sel		1) 4.2)
43	A	Fcn	m/s	
44	A	FG		
45	A	Ff	Hz	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning to the lower adjusting value.
- 3) Assigning to the upper adjusting value.
- 4) Selection of velocity of sound calculation in accordance with VDI 162.
 - 4.1) t-RG: Fixed value for temperature (coordinate H35).
t-den: Temperature of the density transducer (coordinate F1).
t-meas: Temperature of the PT100 (coordinate A1).
 - 4.2) Hs-RG: Fixed value for the superior calorific value (coordinate H46).
Hs-anal: Superior calorific value from the analysis column (coordinate L30 or L34). Only usable in the 9002/4T mode.
Hs-meas: Superior calorific value of the superior calorific value measuring device (coordinate B1). Only usable in the 9102T or 9102/4T modes.

8.2.9 Standard density (frequency input)



S. Density

↓ Direct access

		I (09)	Description of coordinates	Unit	Comment(s)
1	A	rnk	Corrected standard density, calculated	kg/m ³	
2	A	rn	Measured value for standard density	kg/m ³	
3	A	f1	Measured value for input frequency (measuring channel)	Hz	
4	A	f2	Measured value for input frequency (reference channel)	Hz	
5	E	rnmin	Lower adjusting value and fault limiting value	kg/m ³	2)
6	E	rnmax	Upper adjusting value and fault limiting value	kg/m ³	3)
9	B	rn-DF	Default value (replacement value if a fault occurs)	kg/m ³	
10	B	rn-JP	Max. permissible jump from measured value to measured value	%	
14	B	rn<	Contact: lower limit	kg/m ³	
15	B	rn>	Contact: upper limit	kg/m ³	
17	E	rn-mod1	Mode 1: frequency = 2f / off / 1f		1)
18	E	rn-mod2	Mode 2: if a fault occurs = default/measured value (last measurement)		1)
20	A	rn-H	Hold value of the process gas for external calibration	kg/m ³	
21	E	rn-S	Specified value of the test gas for external calibration	kg/m ³	
22	E	drn>L	Maximum deviation for external calibration	%	
23	A	drn	Current deviation for ext. calib. (specified / actual-value comparison)	%	
24	A	rn-E	Measured value of the test gas for external calibration	kg/m ³	
26	E	KW-rn	Standard density correction value after external calibration	kg/m ³	
27	E	KK	Tuning fork constant KK		
28	E	KM	Tuning fork constant KM		
29	E	KR	Tuning fork constant KR		
30	E	KC	Tuning fork constant KC		
43	A	Frnk	Freeze: corrected standard density	kg/m ³	
44	A	Frn	Freeze: standard density	kg/m ³	
45	A	Ff1	Freeze: input frequency (measuring channel)	Hz	
46	A	Ff2	Freeze: input frequency (reference channel)	Hz	

Depending on the set mode (standard density either as frequency or as current), you will be referred to the C column of the I column after selecting the standard density.

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning to the lower adjusting value.
- 3) Assigning to the upper adjusting value.

8.2.10 Volume flow rate at actual conditions



Flow Rate

↓ Direct access

	J (10)	Description of coordinates	Unit	Comment(s)	
1	A	qa	Calculated volume flow rate at actual conditions	m3/h	
2	A	qac	Calculated corrected volume flow rate at actual conditions	m3/h	5)
3	A	fm	Measuring channel input frequency	Hz	
4	A	fr	Reference channel input frequency	Hz	
5	E	qamin	Lower fault limiting value of the volume meter	m3/h	
6	E	qamax	Upper fault limiting value of the volume meter	m3/h	
9	B	q-D%	Max. permissible difference between qam and qar	%	2)
10	B	q-jp	Max. permissible jump from measured value to measured value	%	
13	B	q-A	Averaging factor for flow rate calculation and display		
14	B	qa<	Contact: lower limit	m3/h	
15	B	qa>	Contact: upper limit	m3/h	
17	E	Va-mod1	Mode 1: volume measurement = on / off		1) 3)
18	E	Va-mod2	Mode 2: operating mode = 1-c. / 1:1 (2-chan.) / x:y (2- chan.)		1) 4)
19	E	fault corr.	Mode: error curve linearization: none / polynomial / load points		1) 9)
22	E	d-Kvc>L	Limiting value for max. deviation due to error curve linearization	%	5)
23	A	d-Kvc	Deviation of corrected pulse value (Kvc) from pulse value (Kv)	%	5)
25	A	Kvc	Corrected pulse value of the volume meter	l/m3	5)
26	E	Kv	Volume meter pulse value	pulses/m3	
27	E	MWP	Number of blades of the measuring wheel * 10		
28	E	RWP	Number of blades of the reference wheel * 10		
29	E	DP	Limiting value for the number of missing pulses (official value 10)	pulses	6)
30	E	RP	Limiting value for the number of reference pulses (off. val. 10000)	pulses	6)
31	E	P Start	Suppression of fault messages during startup of volume meter	pulses	
32	E	f<L	Min. volume meter frequency	Hz	7)
33	E	t-qmin	Max. operating time for qa < qa-min	s	8)
34	E	A-2	Polynomial coefficient for error curve linearization		5)
35	E	A-1	Polynomial coefficient for error curve linearization		5)
36	E	A0	Polynomial coefficient for error curve linearization		5)
37	E	A1	Polynomial coefficient for error curve linearization		5)
38	E	A2	Polynomial coefficient for error curve linearization		5)
39	A	>qa	Max. qa value (peak value)	m3/h	
40	A	>	Time of max. value (date / time)		
43	A	Fqa	Freeze: volume flow rate at actual conditions	m3/h	
44	A	Fqac	Freeze: corrected volume flow rate at actual conditions	m3/h	5)
45	A	Ffm	Freeze: measuring channel frequency	Hz	
46	A	Ffr	Freeze: reference channel frequency	Hz	

Comments: See next page.

8.2.11 Energy flow rate



Flow Rate

Indirect access by pressing the → key

	K (11)	Description of coordinates	Unit	Comment(s)
1	A	qQ	Calculated energy flow rate	kW
2	A	qn	Calculated standard volume flow rate	m ³ /h
3	A	ZU(rho)	Volume correct. factor for density correction	
13	A	ZU(rho)-A	Averaging factor for volume correction factor	
14	B	qn<	Contact: lower limit	m ³ /h
15	B	qn>	Contact: upper limit	m ³ /h
16	B	qQ<	Contact: lower limit	kW
17	B	qQ>	Contact: upper limit	kW
39	A	>qn	Max. qn value (peak value)	m ³ /h
40	A	t>qn	Time of max. value (date / time)	
41	A	>qQ	Max. qe value (peak value)	kW
42	A	>	Time of max. value (date / time)	
43	A	Fqn	Freeze: standard volume flow rate	m ³ /h
44	A	FqQ	Freeze: energy flow rate	kW
45	A	FZU(rho)	Freeze: volume correction factor	

Comments on the column for the volume flow rate at actual conditions

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) If the percentage deviation between the qa measuring channel (qam) and the qa reference channel (qar) is smaller than the preset value, the arithmetic mean is used to display the qa flow rate and the qa current output. If the deviation is greater, the greater one of the two flow rates is used.
Attention! The calculation or display of flow rates does not have any effect on the calculation and monitoring of totalizers.
- 3) Va-mod1 = off The Flow Computer operates in the pulse counting mode without monitoring volume limits including f<L.
- 4) Va-mod2 = 1-c J/9, J/27 - J/31 not active
Va-mod2 = 1:1 J/27, J/28 not active
Va-mod2 = x:y J/29, J/30, J/31 not active
- 5) ECL = none The field is not displayed.
- 6) Number of permissible missing pulses for a quantity of reference pulses before an alarm is tripped.
- 7) Lower limiting frequency of the volume meter. When the frequency drops below the lower limiting frequency, correction is no longer carried out.
- 8) Time in seconds during which the volume meter can be operated below qa-min before an alarm is tripped.
- 9) The volume at actual conditions can be corrected via a polynominal or via load points. Please also refer to the annex "Survey of Equations Used".

8.2.12 Analysis



C. Factor

↓ Direct access

Not available with the ERZ 9102 T				
	L (12)	Description of coordinates	Unit	Comment(s)
1	A	VCF	Reference volume correct. factor via press., temp.and compressibility	
2	A	K	Compressibility factor calculated per GERG88-S or default value	
3	A	GCV,G	Via L11 corrected calorific value for GERG88-S	
4	A	rd,G	Via L11 corrected relative density for GERG88-S	
9	B	K-DF	Compressibility factor default value	
11	E	TB	Gas temperature before combustion	°C 1)
13	B	VCF-A	Averaging factor for VCF (from p, t and K)	
17	B	K-mod	Mode: K calculation = GERG88-S / K=const(ant) / GERG88-E	1)
19	A	rncalc	Display of the standard density received by bus	kg/m3
20	A	CO2calc	Display of the CO ₂ content received by bus	%
21	A	H2calc	Display of the hydrogen content received by bus	%
22	B	dVCF>L	Limiting value for max. deviation of both VCFs	%
23	A	dVCF	Actual deviation value of both VCFs	%
24	A	rbcalc	Calculated density at actual conditions	kg/m3
27	B	CO2-2	Carbon content of the gas (contact for analysis switching=open)	% 2) 3)
28	B	H2-2	Hydrogen content of the gas (contact for analysis switching=open)	% 2) 3)
29	B	rn-2	Standard density of the gas (contact for analysis switching=open)	kg/m3 3)
30	B	GCV-2	Superior calorific value of the gas (contact for analysis switch=open)	kWh/m3
31	B	CO2-1	Carbon content of the gas (contact for analysis switching=closed)	% 2)
32	B	H2-1	Hydrogen content of the gas (contact for analysis switching=closed)	% 2)
33	B	rn-1	Standard density of the gas (contact for analysis switching=closed)	kg/m3
34	B	GCV-1	Superior calorific value of the gas (contact for analysis switch=closed)	kWh/m3
40	A	Zn	Real gas factor at standard conditions	
41	A	Z	Real gas factor at actual conditions	
43	A	FVCF	Freeze: volume correction factor	
44	A	FK	Freeze: compressibility factor	

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Inputs must be made in mol %. If values are only available in vol %, you must convert them to mol %. Convert:

$$\text{mol \% CO}_2 = \text{vol \% CO}_2 * 1.0037$$

$$\text{mol \% H}_2 = \text{vol \% H}_2 * 0.9964$$
- 3) Default value for the case of fault.

8.3 Outputs

8.3.1 Current outputs



Output


↓ Direct access



		Analog 1	Analog 2	Analog 3	Analog 4			
		M (13)	N (14)	O (15)	P (16)	Description of coordinates	Unit	Comment(s)
1	A	O1-v	O2-v	O3-v	O4-v	Physical value for output n	variable	
3	A	I	I	I	I	Current for output n	mA	
5	B	O1min	O2min	O3min	O4min	Lower limiting value for output n	variable	2)
6	B	O1max	O2max	O3max	O4max	Upper limiting value for output n	variable	2)
9	B	I1CC	I2CC	I3CC	I4CC	Calibration current default value	mA	3)
11	B	O1J01	O2K01	O3G01	O4F01	Selection of coordinate		4)
12	B	I1C	I2C	I3C	I4C	Correct. factor (D/A converter offset)		
13	B	I1-A	I2-A	I3-A	I4-A	Averaging factor (damping)		
17	B	I1-mod	I2-mod	I3-mod	I4-mod	Mode: operating mode = off / 0-20 mA / 4-20 mA / calibration current		1)

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Assigning physical limits to 0/4 mA or 20 mA.
- 3) If the "calibration current" mode is selected under I(n)-mod, the corresponding output (n) operates as current transmitter. The current value preselected in this field will be outputted.
- 4) Selection of measured value to be outputted as current. Preselected the value via its coordinate. Example: See Annex B.

8.3.2 Dispatcher outputs

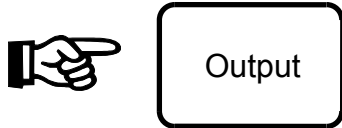


Indirect access by
pressing the




		Digital 1	Digital 2			
		Q (17)	R (18)	Description of coordinates	Unit	Comment(s)
1	A	Dispatcher 1	Dispatcher 2	Designation of the selected dispatcher		
9	B	P width	P width	Setting the dispatcher pulse width (50 - 300)	ms	
11	B	D1CS	D2CS	Assignment of the dispatcher = Va / Vn / Vac / Ve		1)
17	B	D1-mod	D2-mod	Mode: dispatcher = off / on		1)
27	B	Df1	Df2	Pulse value (0.001 to 10000)		

- 1) Rolling texts! Press the **MODE** key to make your changes.

8.3.3 Data interface A

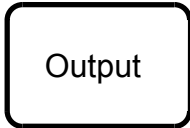



Indirect access by pressing the  key 6 times

	S (19)	Description of coordinates	Unit	Comment(s)
1	A	Data 1/ Front		2)
2	B	D-mod1		1)
3	B	D-mod2		1)
4	B	baudr.		1)
9	A	Data 2 / C1		2)
10	B	D-mod1		1)
11	B	D-mod2		1)
12	B	baudr.		1)
17	A	Data 3 / C3		2)
18	B	D-mod1		1)
19	B	D-mod2		
20	B	baudr.		1)
21	B	stopbit		1)
22	B	parity		1)
25	A	Data 4 / C4		2)
26	B	D-mod1		1)
27	B	D-mod2		
28	B	baudr.		1)
29	B	stopbit		1)
30	B	parity		1)
31	A	RBS:		
34	A	Data 5 / C5		2)
35	B	D-mod1		1)
36	B	D-mod2		
37	B	baudr.		1)
38	B	stopbit		1)
39	B	parity		1)

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Heading, no writing into this data field.

8.3.4 Data interface B

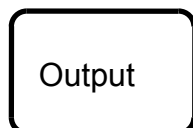

Indirect access by
pressing the  key 7 times

	T (20)	Description of coordinates	Unit	Comment(s)
1	A	Data 6 / C2		2)
2	B	D-mod1		1)
4	B	baudr.		1)
5	B	stopbit		1)
6	B	parity		1)
7	E	DSfG-addr		
8	E	Preset U		
9	E	Source-Addr		
10	E	Source-preset		
11	E	DSFG-Addr. R		
12	E	Preset R		
13	A	E-1		3)
14	A	T-1		3)
15	A	E-2		3)
16	A	T-2		3)
17	A	E-3		3)
18	A	T-3		3)
19	A	E-4		3)
20	A	T-4		3)
21	A	E-5		3)
22	A	T-5		3)
23	A	E-6		3)
24	A	T-6		3)
25	A	E-7		3)
26	A	T-7		3)
27	A	E-8		3)
28	A	T-8		3)
29	A	E-9		3)
30	A	T-9		3)
31	A	E-10		3)
32	A	T-10		3)
34	A	print format		2)
35	B	P-CH1		1) 4)
36	B	P-CH2		1) 4)
37	B	P-CH3		1) 4)
38	B	P-CH4		1) 4)
39	B	P-CH5		1) 4)
40	B	P-CH6		1) 4)
41	B	P-CH7		1) 4)
42	B	P-CH8		1) 4)

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) Heading, no writing into this data field.
- 3) Log for remote adjustment via data transmission when using the DSfG interface.
- 4) Free assembly of the print format.

8.4 Totalizers



↓ Direct access


	U (21)	Description of coordinates	Unit	Comment(s)
1	A	Q	MJ	
2	A	Vac	m3	2)
3	A	Va	m3	
4	A	Vn	m3	
9	A	QD	MJ	
10	A	VcD	m3	2)
11	A	VaD	m3	
12	A	VnD	m3	
17	E	INDXmod		1) 3)
18	B	INDX S1		1)
19	B	INDX S2		1)
20	B	If1		1)
21	B	If2		1)
25	E	Vac-set	m3	2) 4)
26	E	Vn-set	m3	4)
27	E	Q-set	MJ	4)
28	E	Va-set	m3	4)
29	E	VcD-set	m3	2) 4)
30	E	VnD-set	m3	4)
31	E	QD-set	kWh	4)
32	E	VaD-set	m3	4)
43	A	FQ	MJ	
44	A	FVac	m3	2)
45	A	FVa	m3	
46	A	FVn	m3	

The number of digit positions preceding or following a decimal point depends on the size of the flow meter preset in the ID data field.

	Size ≤ G 2500		Size > G 2500	
	Digit positions preceding / following a decimal point		Digit positions preceding / following a decimal point	
Vn	10	3	11	2
Va	9	3	10	2
Vac	9	3	10	2

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) ECL (J19) = no: The field is not displayed.
- 3) Tot-mod = alarm stop: In the event of an alarm (Annex D) the main totalizers stop and the disturbing quantity totalizers start to run.
Tot-mod = alarm run: In the event of an alarm (Annex D) the main totalizers continue to run and in addition to this, the disturbing quantity totalizers start to run.
- 4) To set the totalizer, you must first input the code number and then set the calibration switch to "Input". Example: see Annex D.
Attention! Observe the sequence of operations.

8.5 Test

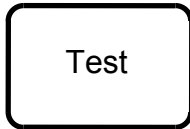

↓ Direct access

	V (22)	Description of coordinates	Unit	Comment(s)
1	A	CQ	MJ	2)
2	A	CVac	m3	1) 2)
3	A	CVa	m3	2)
4	A	CVn	m3	2)
5	A	t CDO	s	3)
43	A	FQD	MJ	
44	A	FVcD	m3	1)
45	A	FVaD	m3	
46	A	FVnD	m3	

- 1) ECL (J19) = "none": The field is not displayed.
- 2) The totalizer can be started and stopped independently of the main totalizer via the TEST key. See also Chapter "TEST" Key Special Function.
- 3) Indication of running time of the totalizers for calibration during operation.

8.6 ID display




↓ Direct access

	W (23)	Description of coordinates	Unit	Comment(s)
1	A	Heading		
2	A	ID		1)
3	A	Bottom line		

- 1) Display of ID data. The contents and the length of ID data field depend on the chosen model. Make your inputs in the ZB column.

8.7 Mode




Indirect access by
pressing the  key

		X (24)	Description of coordinates	Unit	Comment(s)
1	A	Heading	Mode		
2	E	Time	Current time		
3	E	Date	Current date		
4	E	Code	User code (can only be defined if slide switch is set to "Input")		
5	A	op-h.	Indication of operating hours	hours	
6	B	F mod	Freeze mode = manual or automatic (min / hour / day / week / month)		1) 2)
7	B	F time	Time: freeze start		
8	B	F date	Date: freeze start		
9	B	F repeat	Repetition rate for automatic freezing		2)
10	A	F	Indication of time / date of last freeze operation		
11	B	Pr-mod1	Print initiation via internal clock or external contact		1)
12	B	Pr-mod2	Switching over between automatic and revision print		1) 3)
13	B	Pr-mod3	Manual printout or channel data report		1) 6)
14	B	Pr-start	Start time for automatic printout		
15	B	Auto rep	Repetition time for automatic printout (0, 1, 2, 3, 4, 6, 12, 24)	hours	5)
16	B	Rev. rep	Repetition time for revision printout (1 to 99)	minutes	
17	A	LPr	Time of last printout		
18	B	><Cont	Limit contacts: definition of coordinate (assignm. to a meas. value)		1) 4)
19	B	Display-mod	Active display time (30 min / 6h - 18h / continuous duty)		1)
20	A	Comp. type	9000T		
21	A	Version	Software version: version No. / date		
22	B	Comp. No.	Serial number		
23	E	Comp. mod	Mode: 9002T / 9002/4T / 9102/4T / 9104T / 9004T / 9004 / 9002TM		1)
24	B	RTC-corr	Correction factor for real-time clock		
25	E	f Vol	Internal clock frequency (quartz divided by 12) for volume frequencies	Hz	
26	E	f Den	Internal clock frequency (quartz divided by 12) for density frequencies	Hz	
27	A	Lamp test bottom	Lamp test of bottom line of display		
28	A	Lamp test top	Lamp test of top line of display		
31	B	Day print	on / off; printing the sum of the day (ethylene)		
32	B	t-DayPrint	hh-mm-ss; time for starting the day print		
33	B	Page length	Number of lines per page (e.g. 62)		
34	B	St.	Name of station; input via PC, 15 characters		
35	B	Del.	Name of customer; input via PC, 15 characters		
36	B	MS	Measuring point; input via PC, 15 characters		
37	B	Pr.	Product (gas type); input via PC, 15 characters		

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) If F-mod = "manual" is selected, the F-rep mode is not active.
If F-mod = "minute", "hour", "day", "week", or "month" is selected, the freeze operation is carried out periodically in connection with the field X9. See also Chapter "Test" Key Special Function.
- 3) Printing is automatically carried out in connection with the field X15 or as revision printing in connection with the field X16.
- 4) Select the measured value whose < and > limit contacts should be available as output contacts.
- 5) Repetition time = 0: printing is carried out only once a day at the set start time.
- 6) The manual print out is **not** possible at a full hour plus/minus 10 minutes (only from hh:11:00 to hh:49:00). Otherwise there might be a conflict with the automatic print.

8.8 Clear / Fault

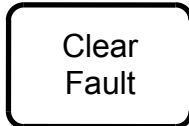


↓ Direct access


	Y (25)	Description of coordinates	Unit	Comment(s)
1	A	Heading		
2	A	Status		
3	A	Time		
4	A	Date		
5	A	Clear fault ?		
6	A	CF		
7	A	Def.wr.:		
17	B	Fault-mod		1)
20	E	rn mod		1)
21	B	External		1)
22	E	AD corr		
23	E	2-Way?		
29	B	PGC-Timeout		2)

For more information, please refer to Chapter 5.

- 1) Rolling texts! Press the **MODE** key to make your changes.
- 2) The Flow Computer monitors the measuring internals of the PGC. Settable in minutes. Special case: monitoring is switched off at 999. This is of importance if a revision of the PGC is to be made.

8.9 Error curve linearization via load points

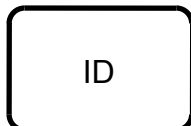


Indirect access by
pressing the  key 3 times


	ZA (26)	Description of coordinates	Unit	Comment(s)
1	A	Heading		
2	E	LP-n	%	1)
3	E	E-LP-n	%	1)

- 1) Load point data input fields.
 LP : Load point = percentage load of the gas meter related to $q_{a_{max}}$.
 E-LP : Error at the load point = percentage error of the meter at the selected load point with regard to the zero line

You can input a maximum of 12 load points. If less than 12 load points are required, you must program the next unused load point LP to carry the value 0. The value 0 serves the flow computer as an abort condition.

8.10 ID input

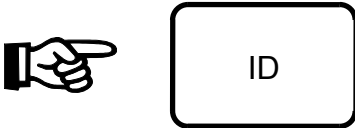



Indirect access by
pressing the  key 4 times

	ZB (27)	Description of coordinates	Unit	Comment(s)
1	A	Heading	ID input	
2	E	ID	Input fields for ID display	1)

- 1) ID data input fields.
The length of the column ZB and, therefore, the length of the ID display depend on the chosen model.

8.11 Backup data (only for service)

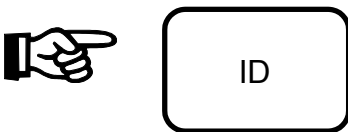

Indirect access by
pressing the  key 5 times

	ZC (28)	Description of coordinates	Unit	Comment(s)
1	A	Heading	backup value	1)
...
47	A	ID	backup value	1)

- 1) This column is only displayed if the calibration switch is set to "Input".

Annex A Survey of Equations Used

Equations for the ERZ 9102 T and ERZ 9102/4 T

Volume flow rate at actual conditions

q_a	=	Volume flow rate at actual cond.	(m ³ /h)
f_V	=	Volume transmitter frequency	(Hz)
K_V	=	Meter factor	(pulses/m ³)

$$q_a = \frac{f_V}{K_V} \cdot 3600$$

Volume at actual conditions

V_a	=	Volume at actual conditions	(m ³)
p_V	=	Volume pulse	
K_V	=	Meter factor	(pulses/m ³)
K_{Z1}	=	V_a totalizer factor (output contact only)	

$$V_a = \frac{p_V}{K_V} \cdot \frac{1}{K_{Z1}}$$

Density at actual conditions

r_a	=	Density at actual conditions	(kg/m ³)
K_0	=	Transducer constant	
K_1	=	Transducer constant	
K_2	=	Transducer constant	

$$r_a = K_0 + K_1 \cdot \tau + K_2 \cdot \tau^2$$

$$\tau = \frac{1}{f} \cdot 10^4 = \text{period } (\mu\text{s})$$

Standard density

r_n	=	Standard density	(kg/m ³)
K_K	=	Transmitter / transducer constant	
K_M	=	Transmitter / transducer constant	
K_R	=	Transmitter / transducer constant	
K_C	=	Transmitter / transducer constant	

$$r_n = K_K \cdot \frac{K_M + \tau_M^2}{K_R + \tau_R^2} + K_C$$

$$\tau = \frac{1}{f} \cdot 10^4 = \text{Periode } (\mu\text{s})$$

Volume correction factor for standard volume calculation

$VCF_{(Rho)}$	=	Volume correction factor	
r	=	Density at actual conditions	(kg/m ³)

$$VCF_{(Rho)} = \frac{r}{r_n} = \frac{V_n}{V_a}$$

Standard volume

V_n	=	Standard volume	(m ³)
V_a	=	Volume at actual conditions	(m ³)
$VCF_{(Rho)}$	=	Volume correction factor	
K_{Z2}	=	V_n totalizer factor (output contact only)	

$$V_n = V_a \cdot VCF_{(Rho)} \cdot \frac{1}{K_{Z2}}$$

Standard volume flow rate

q_n	=	Standard volume flow rate	(m ³ /h)
f_V	=	Volume transmitter frequency	(Hz)
K_V	=	Meter factor	(pulses/m ³)

$$q_n = \frac{f_V}{K_V} \cdot VCF \cdot 3600$$

Energy

V_e	=	Energy	(kWh) (MJ)
$H_{s,n}$	=	Superior calorific value	(kWh/m ³)
K_{Z2}	=	V_e totalizer factor (output contact only)	

$$V_e = V_n \cdot H_{s,n} \cdot \frac{1}{K_{Z2}}$$

Energy flow

q_e	=	Energy flow	(kW) (MJ/h)
-------	---	-------------	-------------

$$q_e = V_n \cdot H_{s,n} \cdot 3600$$

Equations for the ERZ 9102/4 T

Compressibility factor

K = Compressibility factor

Z = Real gas factor

Z_n = Real gas factor at standard conditions

Calculation is made in accordance with GERG 88 pursuant to G 9.

$$K = \frac{Z}{Z_n}$$

Reference volume correction factor

VCF_(p,t) = Volume correction factor

p = Absolute pressure (bar)

T = Temperature (Kelvin)

T_n = Standard temperature (Kelvin)

p_n = Standard pressure (bar)

$$VCF_{(p,t)} = \frac{p \cdot T_n}{p_n \cdot T \cdot K}$$

Gas meter error curve linearization

Polynomial

Linearization is made using a quartic polynomial which simulates the error curve of the gas meter.

Error equation: $E = A_{-2} \cdot q_a^{-2} + A_{-1} \cdot q_a^{-1} + A_0 + A_1 \cdot q_a + A_2 \cdot q_a^2$

E = Deviation of the error curve (%)

q_a = Volume flow rate at actual cond. (m³/h)

A_n = Constants

The following values are permanently programmed in the computer: A₁: 10⁻⁴ A₂: 10⁻⁸

The constants A_n (n = -2 to n = 2) are calculated from the measured value pairs error E_i and flow rate q_{ai}. Instead of the constant meter factor K_V the corrected meter factor K_{Vc} is used for subsequent calculation or correction.

$$K_{Vc} = K_V \cdot \left(1 + \frac{f}{100}\right)$$

Load point method

The load point method includes up to 12 load points. The selected percentage loads related to q_{a,max} are entered on the x-axis (parameters LP n). LP stands for "load point" and n for 1...12. For each load point, the deviation from the zero line is entered (parameters E-LP n). E-LP stands for "error at the load point". Make your inputs in the column ZA. If less than 12 load points are required, you must program the next unused load point to carry the value 0 as an abort condition for the linearization program.


Note: You must input the values in the min. to max. load sequence!

Thus, the volume flow rate at actual conditions q_a is calculated from the following equation:

f_V = Volume transmitter frequency (Hz)

K_{Vc} = Corrected meter factor (pulses/m³)

$$q_{ac} = \frac{f_V}{K_{Vc}} \cdot 3600$$

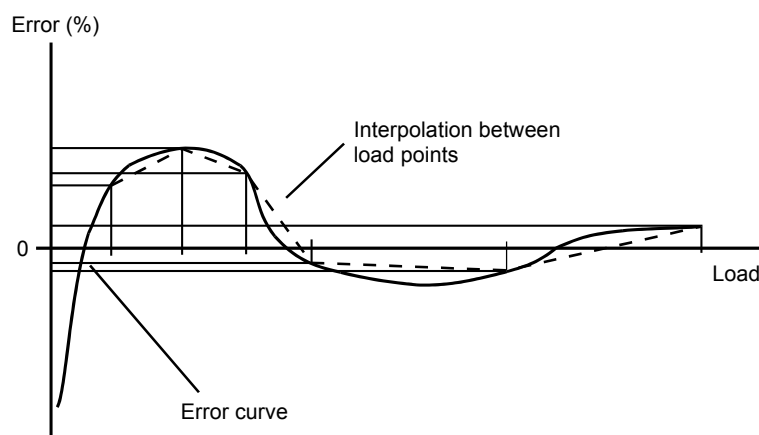

Velocity of sound correction

General equation

- r_c = Corrected density (kg / m³)
- r = Density
- C_R = Velocity of sound of the test gas
- C_n = Velocity of sound of the measuring gas
- L = Density transmitter constant *)
- K_4 = Correction factor
- K_5 = Correction factor

$$r_c = r \cdot G \cdot K_4 + K_5$$

$$G = \frac{1 + \left(\frac{L}{C_R}\right)^2}{1 + \left(\frac{L}{C_n}\right)^2}$$

*) Correction polynomial: $L = L_R = 53.36$
 VOS 07 : $L = L_B = 59.35$

The velocity of sound correction of density transmitters can be made using a correction polynomial or can directly be determined using a velocity of sound transducer of the Type VOS 07.

Correction polynomial per VDI 162 (RG equation)

$$c = F [B_n(H_s), d, T, r]$$

$$c = B_0 + B_1 d^{-0.5} T + B_2 T^2 r^{0.5} + B_3 d^{0.5} T r^2 + B_4 d T r + B_5 d T^{1.5} r + B_6 d^{1.5} T^{0.5} r^{1.5} + B_7 d^{1.5} T^{1.5} + B_8 d^{1.5} T^{1.5} r^{0.5} + B_9 d^2 T^{1.5}$$

- c = Velocity of sound at actual conditions
- d = Relative density (1)
- T = Temperature (K) Options: Fixed or measured value (see column H)
- r = Density (kg / m³)

$B_n(H_s)$ = Coefficients as a function of H_s areas (permanently programmed)

	$H_s < 10.6944$	$10.6944 < H_s < 11.5277$	$H_s > 11.5277$
B_0	1.822595 10 ²	1.568658 10 ²	2.302653 10 ²
B_1	8.221071 10 ⁻¹	1.119439 10 ⁰	3.777580 10 ⁻¹
B_2	-5.084184 10 ⁻⁵	4.600361 10 ⁻⁶	-4.786103 10 ⁻⁵
B_3	3.829436 10 ⁻⁵	2.322149 10 ⁻⁵	6.695133 10 ⁻⁵
B_4	-1.165260 10 ⁻²	-2.341091 10 ⁻²	-8.855152 10 ⁻³
B_5	8.407637 10 ⁻⁴	1.175120 10 ⁻³	8.504273 10 ⁻⁴
B_6	-1.37930 10 ⁻²	-1.494210 10 ⁻⁴	-2.564873 10 ⁻²
B_7	-4.728010 10 ⁻²	-2.455314 10 ⁻¹	2.061311 10 ⁻¹
B_8	2.394719 10 ⁻⁴	-2.079697 10 ⁻⁴	-6.713583 10 ⁻⁴
B_9	2.771205 10 ⁻²	2.314010 10 ⁻¹	-2.335991 10 ⁻¹

VOS 07 Velocity of sound transducer (without temperature correction)

- C_n = Velocity of sound at standard conditions
- f = Transducer frequency (Hz)
- T_c = Gas temperature (K)
- K_A = Transducer constant
- K_B = Transducer constant

$$C_n = f \cdot K_A \cdot \sqrt{\frac{T_n}{T_c}} + K_B$$

VOS 07 Velocity of sound transducer (with temperature correction)

additionally with:

- T_{cal} = Calibration temperature (K)

$$C_n = f \cdot K_A \cdot \sqrt{\frac{T_n}{T_c}} + K_B \cdot (T_c - T_{cal})$$

Annex B Operating Examples

Displaying measured values and constants

1. example

Press the **PRESSURE** key

P	34,26	bar a
I	13,50	mA

Press ↓

P	34,26	bar a
P-min	10,00	bar a

P min

Press ↓

P	34,26	bar a
P-max	50,00	bar a

P max

Press →

T	10,57	bar a
T-max	30,00	mA

T max

Press →

qa	734,26	m3/h
qa-max	3600,00	m3/h

qa max

2. example

Press the **C FACTOR** key

VCF	55,41	
K	0,988	

Press ↓ 6 times

VCF	55,41	
K-mod	Gerg	

Press ↓ 7 times

VCF	55,41	
CO2	xx,xx	%

Press ↓

VCF	55,41	
H2	xx,xx	%

Press ↓

VCF	55,41	
rn-2	x,xxx	k/m3

Press ↓

VCF	55,41	
GCV-2	xx,xx	kWh/m3

Programming a new constant

You want to change the p-max value to 41,50 bar.

Press the **Pressure** key

P	34,26	bar a
I	13,50	mA

Press ↓ twice

P	34,26	bar a
P-max	50,00	bar a

P max range

Set the **SWITCH** to "Input"

Press the **Enter** key.

The bottom line of the display turns darker and the POWER / STANDBY LED flashes at one-second intervals to indicate the programming mode.

Press the "4" key

P	34,26	bar a
P-max	4....	

Press the "1", "±", "5" and "0" keys consecutively.

P	34,26	bar a
P-max	41,50	

Press the **Enter** key

P	34,26	bar a
P-max	41,50	bar a

The display turns bright and the unit is indicated again.

Lock the data inputted by means of the **SWITCH**.

Programming is completed!

General information about inputting new values:

If a value is locked with the code number (user data), you must first input the correct code number into the appropriate field (X4) in the **MODE** function (see example on Page 43). You can input values either in the short designation or coordinate display mode. Switching over is possible at any time by pressing the **SELECT** key.

Programming current / dispatcher outputs

Current outputs

You can select the desired values in the columns M11, N11, O11, P11 via the **OUTPUT** function key and the cursor keys. To input coordinates, you must input the appropriate digits (A = 01, B = 02, etc.) instead of the letters of the columns concerned (A, B, etc.). However, you can only connect the fields 1 and 2 of the columns A to L to one current output!

Example: You want to output the standard volume flow rate (field 1, column K) to current output 1. (Column K corresponds to the number 11; see Page 12 Flow Rate 2 column)

- 1) Press the **OUTPUT** key.
- 2) Press ↓ four times ("O1-CS K-1" is indicated on the bottom line of the display).
- 3) Press the **ENTER** key. (The display switches over to "O1-CS 11-1").
- 4) Input the key sequence "1" "1" "1" (for field K1) into the field M11. (The first two digits stand for the column and the third digit stands for the field.)
- 5) Press the **ENTER** key.

Dispatcher outputs

Programming dispatcher outputs is analogous to the procedure for programming current outputs.

Programming a new mode

You want to change the mode of the pressure transmitter from 0-20 mA to 4-20 mA.

Press the **PRESSURE** key.

p	34.26	bara
lp	13.50	mA

Press ↓ nine times.

p	34.26	bara
p-mod1	0-20	mA

Set the **SWITCH** to "Input".

The POWER / STANDBY LED flashes at one-second intervals to indicate the programming mode, and after you have pressed the **ENTER** key, the bottom line of the display turns darker.

Press the **MODE** key.

p	34.26	bara
p-mod1	4-20	mA

The setting changes from 0-20 mA to 4-20 mA.

Press the **ENTER** key and lock the data inputted by means of the "Input" **SWITCH**.

Setting main totalizers

You want to set the main totalizer V_a to 100000.

First input the code number and then set the **SWITCH** to "Input".

Press the **TOTALIZER** key.

Vn	000004321.985	m3
Va	00000346.987	m3

Press ↓ so many times until "Va-set" appears.

Vn	000004321.985	m3
Va-set	0	m3

Press the **ENTER** key. The bottom line of the display turns darker and the POWER / STANDBY LED flashes at one-second intervals to indicate the programming mode.

Press the keys "1" "0" "0" "0" "0" "0" consecutively.

Press the **ENTER** key.

Vn	000004321.985	m3
Va-set	100000	m3

After the data have been transferred, "Va-set" returns to "0".

Then lock the data inputted by means of the "Input" **SWITCH**.

Setting and resetting disturbing quantity totalizers is performed in the same way.

NOTE:

If you set the mode in the column J19 (ECL) to "polynomial" or "load points", the sequence of the totalizers changes, since additional totalizers are inserted for the corrected volume at actual conditions.

Enabling programming

Code number to enable user access

First press the **MODE** key and then the → key. The time is indicated.

Mode
Time: 12-48-10

Press ↓ twice.

Press the **ENTER** key and input the appropriate digits.

Mode
Code **** - ****

Mode
Code *

The digits inputted remain invisible. Each digit is marked with an asterisk.

Press the **ENTER** key to complete the data input.

Mode
Code **** - ****

If the code number is correct, the POWER / STANDBY LED on the front panel starts to flash at one- second intervals. If the code number is incorrect, the display returns to

Mode
Code **** - ****

Repeat the operation using the correct code number!

The computer enables you to access user data. To change data, you must select the desired coordinate on the bottom line of the display and press the **ENTER** key. The brightness of the bottom line is reduced to indicate that access to the coordinate field is enabled. If you want to lock the computer again after having completed your programming, press the **CLEAR / FAULT** key twice quickly. If you forget to do so, the computer itself disables access after approx. 30 minutes. It is possible to change the code number if the sealable slide switch is in its "Input" position.

Sealable switch for the Office of Weights and Measures

When the switch is operated, the POWER / STANDBY LED starts to flash at one-second intervals and access to the memories (incl. code number) is enabled. To change data, you must select the desired coordinate on the bottom line of the display and press the **ENTER** key. The brightness of the bottom line is reduced to indicate that access to the coordinate field is enabled.

Annex C

Technical Data

Inputs

Analog inputs:	14½-bit resolution. Accuracy ± 1 bit, measuring period approx. 100 ms.
Volume frequency:	16-bit resolution. Range: 0.05 Hz to 20 kHz or metering from 0 Hz.
Frequency inputs:	23-bit resolution, range from 0.05 Hz to 25 kHz.
Digital inputs:	Passive (relay or open collector); load 5 V 20 mA.
Status signals:	$td_{high} > 1\text{ s}$ $td_{low} > 1\text{ s}$

Outputs

Analog outputs: 14±1-bit resolution, load 800 ohms, electrically isolated.

Digital outputs: Limiting value 24V 100mA

Dispatcher

Minimum pulse width adjustable from 50 ms (10 Hz) to 300 ms (1.5 Hz).

Output frequency from 0 to 10 Hz, electrically isolated open collector.

Totalizer pulses

Pulse width approx. 150 ms (3 Hz), pulse width not adjustable.

Electrically isolated open collector.

Limit contacts

Electrically isolated open collector.

Fault / Warning

Relay contacts (closed-circuit principle).

Interfaces

Design: Front panel - rack- / wall-mounting unit
1 9-pin subminiature Cannon connector
Rear panel - rack-mounting unit
5 9-pin subminiature Cannon connectors
Rear panel - wall-mounting unit
1 interface, screw terminals in the terminal compartment

Front panel: RS 232 C for personal computer or printer connection

Rear panel: C1 interface
RS 232 C for personal computer or printer connection
C2 interface
RS 485 C for standard data communication applications (DSfG)
C3 interface
RS 232 C for FE-06 connection
C4 & C5 interfaces
RS 232 C - spare -

Power supply

Stand. power supply unit: 24 V DC (21 V to 27 V), power input approx. 35 W


Special version: 230 V AC (-10% to +6%), power input approx. 35 W

Option: The standby battery sustains the power supply of the ERZ 9000T including transducers / transmitters for approx. 30 minutes. After a discharge, the battery attains its full power after approx. 10 hours.

Weight & dimensions

Rack-mounting unit: Height 3 units, width 213 mm, depth 310 mm
weight excl. battery approx. 3.2 kg, weight incl. battery approx. 4 kg
Wall-mounting unit: Height 245 mm, width 340 mm, depth 260 mm
weight excl. battery approx. 3.7 kg, weight incl. battery approx. 4.5 kg

Inputs of the rack-mounting unit

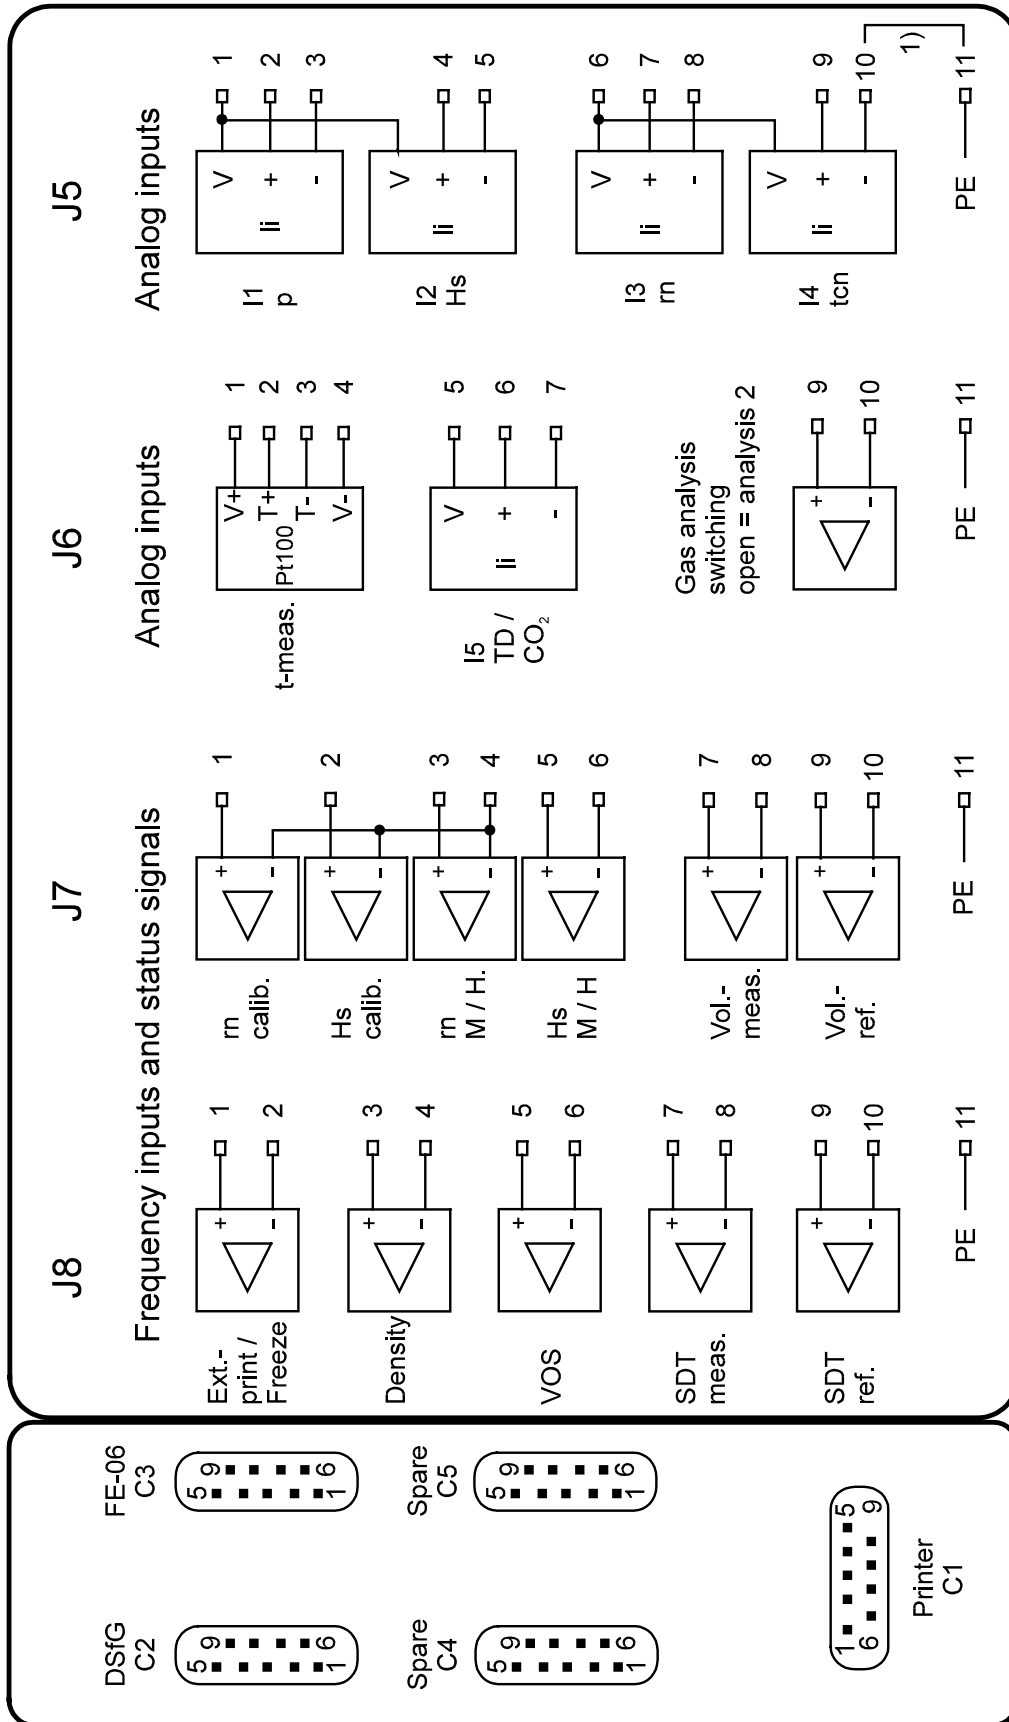


1) Set jumper externally

- J7 - 1 calibrating rn
- J7 - 2 calibrating Hs
- J7 - 3 checking rn (measuring / holding)
- J7 - 5 checking Hs (measuring / holding)
- J8 - 1/2 selectable via **MODE**




Outputs of the rack-mounting unit

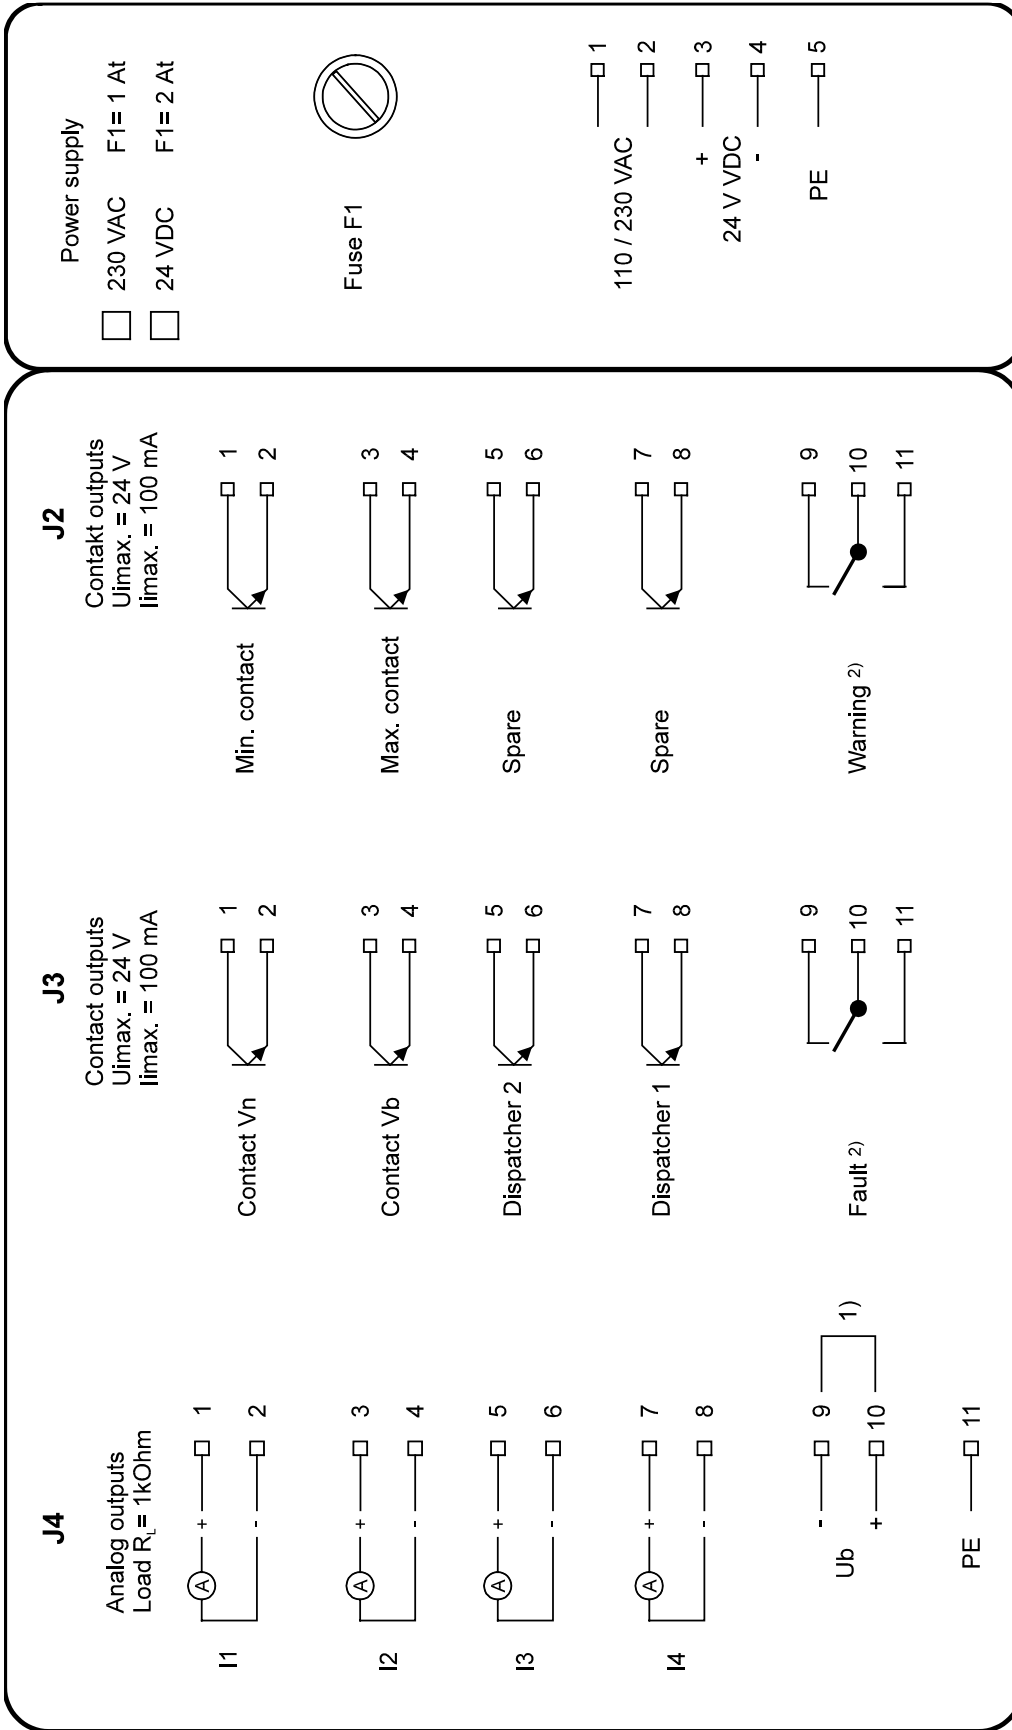

1) When using an internal battery, set a jumper between the contacts 9 and 10. When using an external battery, set the soldering jumper P14 in the ERZ 9000 (see "Technical Data").

2) In the event of fault-free operation, the fault / warning relays are picked up (contacts J3/(9-10) and J2/(9-10) are closed). If a fault occurs and in the event of a power failure, the relays release (contacts J3/(10-11) and J2/(10-11) are closed).

Inputs of the wall-mounting unit

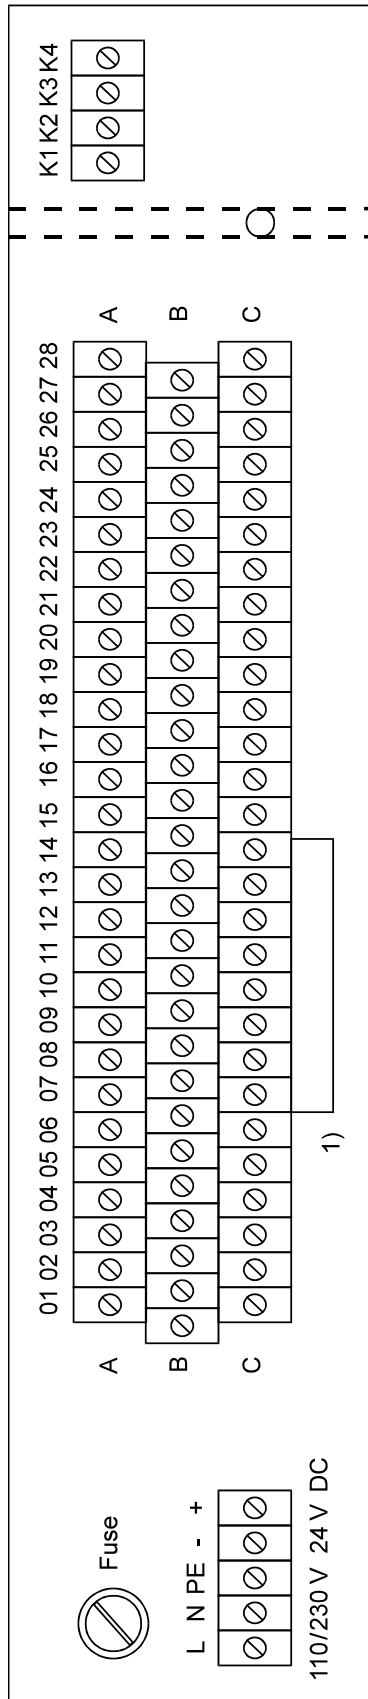


NAMUR signal

Frequency and status signals


-30 to +60°C

0 / 4-20mA

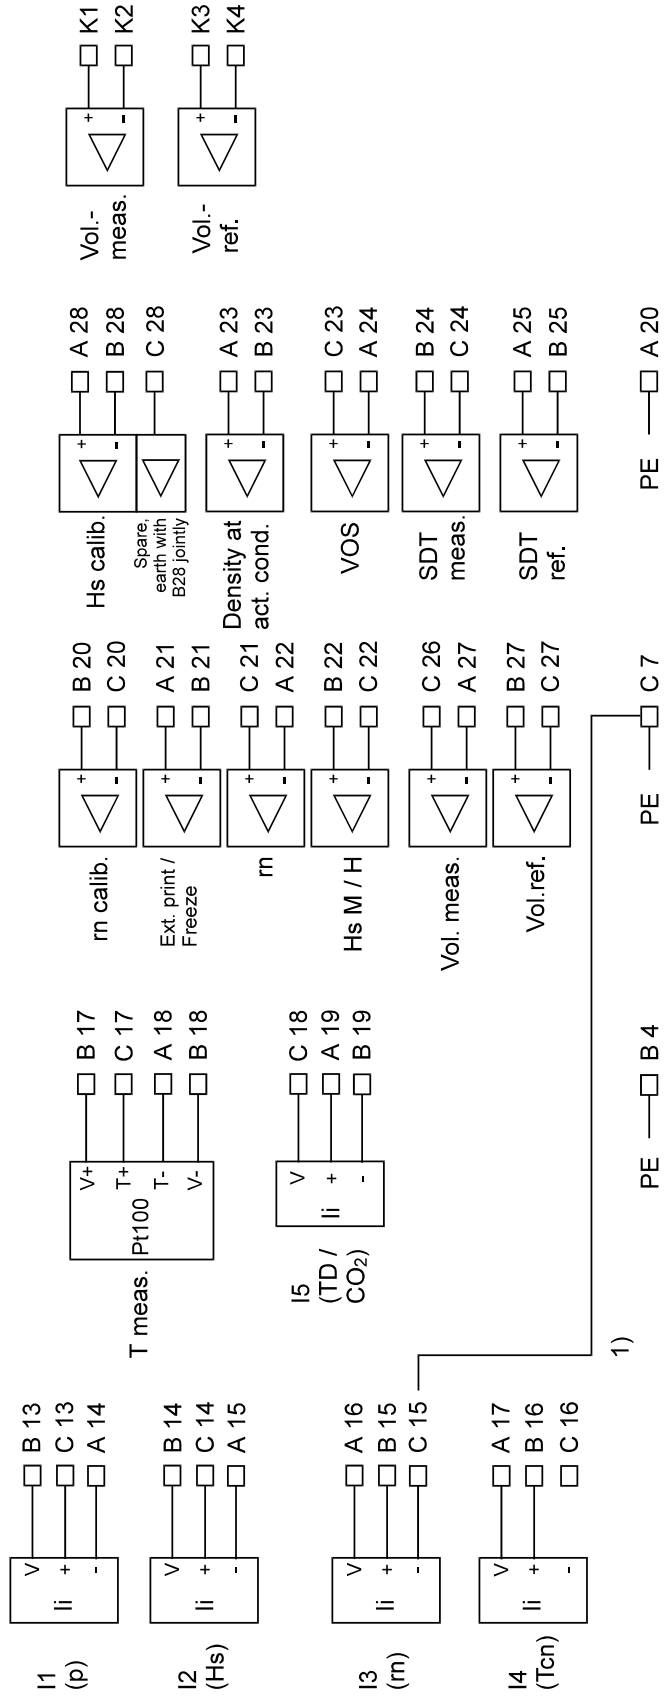

1) Set jumper externally

Outputs of the wall-mounting unit










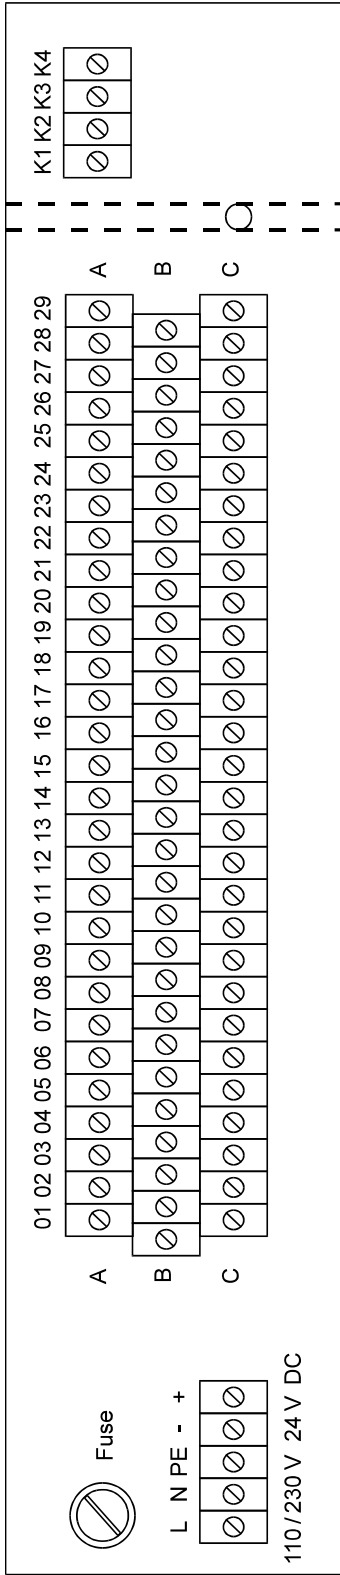


RS 232C No.: **C1**





0 / 4-20mA $R_L = 1 \text{ k}\Omega$

$I_{max} 100\text{mA}$

$U_i \text{ max } 24\text{V}$

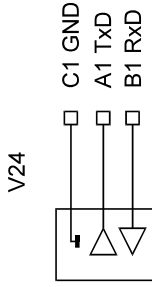

Power supply



- 1) When using an internal battery, set a jumper between the contacts A2 and A6. When using an external battery, set the soldering jumper P14 in the ERZ 9000 (see "Technical data").
- 2) In the event of fault-free operation, the fault / warning relays are picked up (contacts B2-C2 and A4-C3 are closed). If a fault occurs or if the device is disconnected from the power supply, the relays release (contacts C2-A3 and C3-B3 are closed).

Annex E

Fault List

FAULT MESSAGES

No.: Text displayed Explanation

General

02	Power failure	Power failure.
03	Defective clock	Clock component in the ERZ 9000 (CPU 1) is defective.
04	RAM fault	Fault detected when checking the RAM or EEPROM.
05	A/D hardw. 517	Hardware fault A/D measurement 517 on the controller chip.
06	A/D hardw. 7135	Hardware fault A/D measurement 7135 on the A/D converter.
07	Watchdog	Program runtime exceeded / restart of the program.
08	GERG error	GERG iteration (faulty abort).
09	GERG limit.	GERG limiting values were violated
10	8279 fault	Fault occurred when display was outputted or keypad fault.
11	CPU 2 timeout	CPU 2 does not respond to CPU 1.
12	DP receive	Transmission fault in the DUAL-PORT RAM between CPU 1 and CPU 2.
13	DP timeout	Transmission fault in the DUAL-PORT RAM between CPU 1 and CPU 2.
14	Default: Coordinate	When starting the program, an invalid value was found in the memory which was overwritten with a default value.

Volume measurement

15	Pulse comp. 1:1	Pulse comparison 1:1; checking "10 per 10000" with 2-channel measurement.
16	Pulse comp. x:y	Pulse comparison x:y; checking for 4% deviation with 2-channel measurement.
17	Miss.pulse meas.	Missing pulses of the measuring channel.
18	Miss.pulse ref.	Missing pulses of the reference channel.
19	qa min range	Min. range of volume flow rate at actual conditions violated downwards.
20	qa max range	Max. range of volume flow rate at actual conditions exceeded.
21	Delta qa	Delta fault of volume flow rate at act. cond. / Meas.-value jump betw. 2 cycles.
22	Delta Kvc max	Kvc delta fault / Corrected Kv value is greater than permitted.

Analog inputs

23	p hardware	Pressure hardware, e.g. open circuit.
24	p min range	Min. pressure range violated downwards.
25	p max range	Max. pressure range exceeded.
26	p delta	Pressure delta fault / Meas.-value jump between 2 cycles > specified value.
27	Hs,n hardware	Superior calorific value hardware, e.g. open circuit.
28	Hs,n min range	Min. range of superior calorific value violated downwards.
29	Hs,n max range	Max. range of superior calorific value exceeded.
30	Hs,n delta	Superior cal. val. delta fault / Meas.-value jump betw. 2 cycles > specified value.
31	rn hardware	rn hardware, e.g. open circuit.
32	rn min range	Min. rn range violated.
33	rn max range	Max. rn range exceeded.
34	rn delta	rn delta fault / Meas.-value jump between 2 cycles > specified value.
35	I4-in hardware	I4-input tcn hardware, e.g. open circuit.
36	I4-in min range	I4-input min. range of tcn violated downwards.
37	I4-in max range	I4-input max. range of tcn exceeded.
38	I4-in delta	I4-input tcn delta fault / Meas.-value jump between 2 cycles > specified value

39	I5-in hardware	I5-input CO ₂ hardware, e.g. open circuit.
40	I5-in min range	I5-input min. CO ₂ range violated downwards.
41	I5-in max range	I5-input max. CO ₂ range exceeded.
42	I5-in delta	I5-input CO ₂ delta fault / Meas.-value jump between 2 cycles > specified value.
43	t hardware	Temperature hardware, e.g. open circuit.
44	t min range	Min. temperature range violated downwards.
45	t max range	Max. temperature range exceeded.
46	t delta	Temperature delta fault / Meas.-value jump between 2 cycles > specified value.

Totalizers

51	1 out of 3 Va	1-out-of-3 comparison volume at actual conditions.
52	1 out of 3 Vn	1-out-of-3 comparison standard volume.
53	1 out of 3 Vac	1-out-of-3 comparison corrected volume at actual conditions.
54	1 out of 3 Ve	1-out-of-3 comparison energy.
55	1 out of 3 VaD	1-out-of-3 comparison disturbance of volume at actual conditions.
56	1 out of 3 VnD	1-out-of-3 comparison disturbance of standard volume.
57	1 out of 3 VacD	1-out-of-3 comparison disturbance of corrected volume at actual conditions.
58	1 out of 3 VeD	1-out-of-3 comparison disturbance of energy.
59	1 out of 3 NOV-TOT	1-out-of-3 comparison NOVRAM.

Frequency inputs

60	ra failure	ra hardware, e.g. open circuit.
61	ra min range	Min. ra range violated downwards.
62	ra max range	Max. ra range exceeded.
63	ra delta	ra delta fault / Meas.-value jump between 2 cycles > specified value.
64	cn failure	VOS hardware, e.g. open circuit.
65	cn min range	Min. VOS range violated downwards.
66	cn max range	Max. VOS range exceeded.
67	cn delta	VOS delta fault / Meas.-value jump between 2 cycles > specified value.
68	rn 1 failure	Failure of standard density transmitter frequency 1.
69	rn 2 failure	Failure of standard density transmitter frequency 2.

PGC (via Databus)

116	PGC-Timeout	No analysis results from PGC for specified period of time
117	PGC-Fault	Fault occurred in PGC

HART transmission

126	Sensor-Alarm	In HART mode: a transmitter has set alarm bit
-----	--------------	---

WARNINGS

No.: Text displayed Explanation

Current inputs

47	tra hardware	Temperature of density transmitter hardware, e.g. open circuit.
48	tra min range	Min. temperature range of density transmitter violated downwards.
49	tra max range	Max. temperature range of density transmitter exceeded.
50	tra delta	Temp. density delta fault /Meas.-value jump betw. 2 cycles > specified value.

Totalizers and flow rate

70	r / r corr. max	Permissible deviation exceeded.
71	VCF1 / VCF2 max	Permissible deviation exceeded.
72	Dispatcher 1	Dispatcher output 1 / Pulse buffer overflow.
73	Dispatcher 2	Dispatcher output 2 / Pulse buffer overflow.
74	el.mech. TOT1	Output contacts of totalizer V_a / Pulse buffer overflow.
75	el.mech. TOT2	Output contacts of totalizer V_n / Pulse buffer overflow.
76	Buffer data	Data buffer overflow for printer interface.
77	qa min limit	Min. limit of volume flow rate at actual conditions violated downwards.
78	qa max limit	Max. limit of volume flow rate at actual conditions exceeded.
79	qn min limit	Min. limit of standard volume flow rate violated downwards.
80	qn max limit	Max. limit of standard volume flow rate exceeded.
81	qe min limit	Min. limit of energy flow violated downwards.
82	qe max limit	Max. limit of energy flow exceeded.
83	cn min limit	Min. VOS limit violated downwards.
84	cn max limit	Max. VOS limit exceeded.
85	Hsn min limit	Min. limit of superior calorific value violated downwards.
86	Hsn max limit	Max. limit of superior calorific value exceeded.
87	Hsn calibration	Error during on-line correction of superior calorific value.
88	rn calibration	Error during on-line correction of standard density as current.
89	rn (f) calibration	Error during on-line correction of standard density as frequency.

Current outputs

90	I1 out min	Current output 1 min. violated downwards.
91	I2 out min	Current output 2 min. violated downwards.
92	I3 out min	Current output 3 min. violated downwards.
93	I4 out min	Current output 4 min. violated downwards.
94	I1 out max	Current output 1 max. exceeded.
95	I2 out max	Current output 2 max. exceeded.
96	I3 out max	Current output 3 max. exceeded.
97	I4 out max	Current output 4 max. exceeded.

Limit contacts

98	p min limit	Min. limit of pressure violated downwards.
99	p max limit	Max. limit of pressure exceeded.
100	Hsn min limit	Min. limit of superior calorific value violated downwards.
101	Hsn max limit	Max. limit of superior calorific value exceeded.
102	CO ₂ min limit	Min. CO ₂ limit violated downwards.
103	CO ₂ max limit	Max. CO ₂ limit exceeded.
104	rn min limit	Min. limit of standard density (current) violated downwards.
105	rn max limit	Max. limit of standard density (current) exceeded.
106	rnf min limit	Min. limit of standard density (frequency) violated downwards.
107	rnf max limit	Max. limit of standard density (frequency) exceeded.
108	ra min limit	Min. limit of density at actual conditions violated downwards.
109	ra max limit	Max. limit of density at actual conditions exceeded.

110	I4-in min limit	Min. limit of I4 input violated downwards (tcn or CO ₂).
111	I4-in max limit	Max. limit of I4 input exceeded (tcn or CO ₂).
112	t min limit	Min. limit of temperature at measuring conditions violated downwards.
113	t max limit	Max. limit of temperature at measuring conditions exceeded.
114	tra min limit	Min. temperature limit of density transmitter violated downwards.
115	tra max limit	Max. temperature limit of density transmitter exceeded.
118	Power Valid	Internal power supply: max. deviation exceeded.

EZD at interface C3

119	C3 Checksum	Checksum, related to interface C3, also for HART.
120	C3 Protocol	Protocol fault, related to interface C3, also for HART.
121	EZD Timeout	No data transmission.
122	EZD Delta	Totalizer change bigger than according to HF/NF.
125	EZD Value	HF pulses measured but there is no totalizer change.

HART transmission

123	Hart Timeout	Fault in data transmission between HART card and CPU card.
124	Param. change	HART transmitter parameters have been changed by handheld device.

Transmission of Measured Values or Data for Custody Transfer Metering between the GC 9000 Process Gas Chromatograph and the RMG ERZ 9000 T Flow Computer via the RMG-BUS

This digital interface is an RS 485-based bus connection designed in accordance with the MODBUS. The GC 9000 process gas chromatograph (PGC) operates as master and sends measured values and status signals cyclically via the broadcasting feature at address 0 to the correctors connected (slaves).

Data interface on the GC 9000:
RS 485 bus interface with master function

Data interface on the ERZ 9000 T:
RS 485 bus interface with slave function

Data transmission:
Data transmission between the GC 9000 and the ERZ 9000 T operates in such a way that similar to a current output, there is a permanent connection between the devices. On the receiver side, digital data are handled in the same way as measured values of current inputs (min./max. monitoring, timeout and plausibility checks).

Data security:
In order to secure data, the element (unit encryption) specified in the PTB Regulations 50.31 is used for encryption and authenticity checks.
Checksums are formed using all measured values and status signals.
The checksum is attached as last value to the message and accompanies the data,during transmission.

Description of message:
The MODBUS function 16 "write request" is used with address 0 (broadcasting).
:kk102222nnnnbb<Data>BCC<CRLF>

Signification:

: Start of characters
kk User address, here particularly 0 for broadcasting
10H MODBUS function 16 (hexadecimal number)
ssss Start of address of the registers to be used (0 ... 65535)
nnnn Number of registers to be used (1 ... 63)
bb Number of bytes to be transmitted
BCC CRC12 checksum procedure (see annex)
CRLF End of characters (carriage return, line feed)

Data	Address				
	7001	methane		7033	superior calorific value
	7002	ethane		7034	inferior calorific value
	7003	propane		7035	relative density
	7004	iso-butane		7036	standard density
	7005	n-butane		7037	Wobbe index
	7006	neo-pentane		7038	Zn compressibility factor
	7007	iso-pentane		7039	not assigned
	7008	n-pentane		7040	status
	7009	hexane			
	7010 - 7014	not assigned			
	7015	nitrogen			
	7016	CO ₂			
	7017 - 7032	not assigned			

PGC Status

Calibration status / internal connection of test gas

While test gas is being connected internally, the last measured values are sent.


Revision status / external connection of test gas

While test gas is being connected externally, the last measured values are sent.
External connection of test gas must be communicated to the PGC (contact, etc.).

Fault status / startup after POWER ON / internal faults


During the startup phase (warming-up, calibration, etc.), the PGC provides no measured values, but default values (fixed values).

Handling of faults occurring on the RMG-BUS digital interface for:
 superior calorific value, standard density / relative density, carbon dioxide, nitrogen

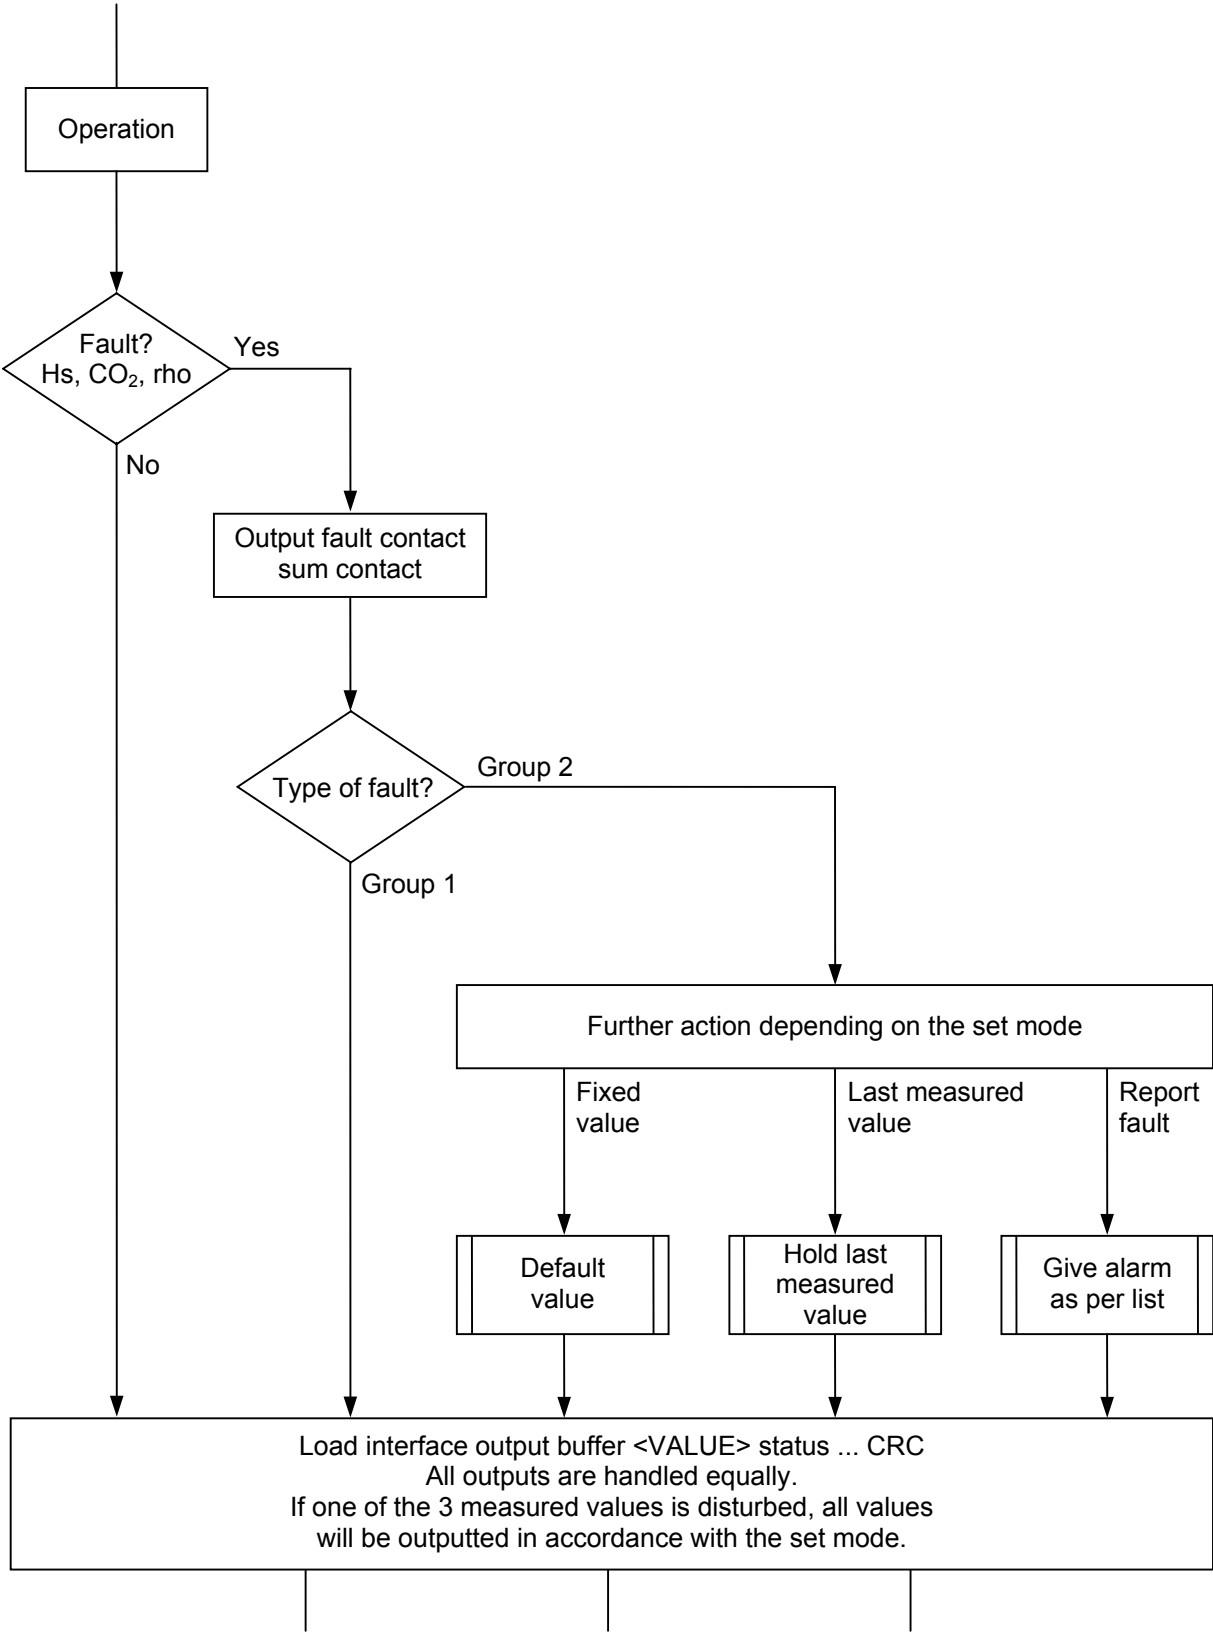

Connecting a PGC Type GC 9000 together with an ERZ 9000 T corrector


1. Analog interface

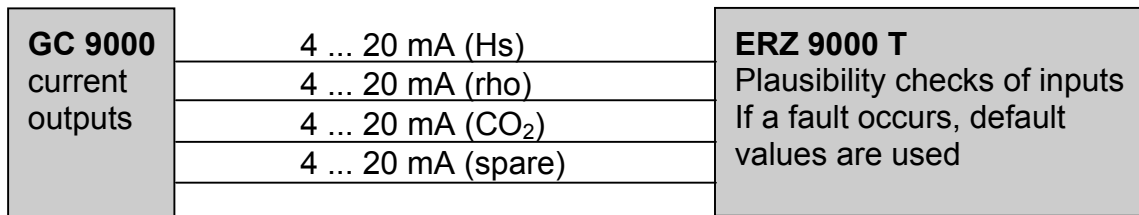

2. RMG-BUS digital interface

Transmission of measured data is secured by

- a. BCC (CRC procedure) to secure the transmission route
- b. plausibility checks to monitor limits and verify contents
- c. timeout feature to monitor the transmission cycle

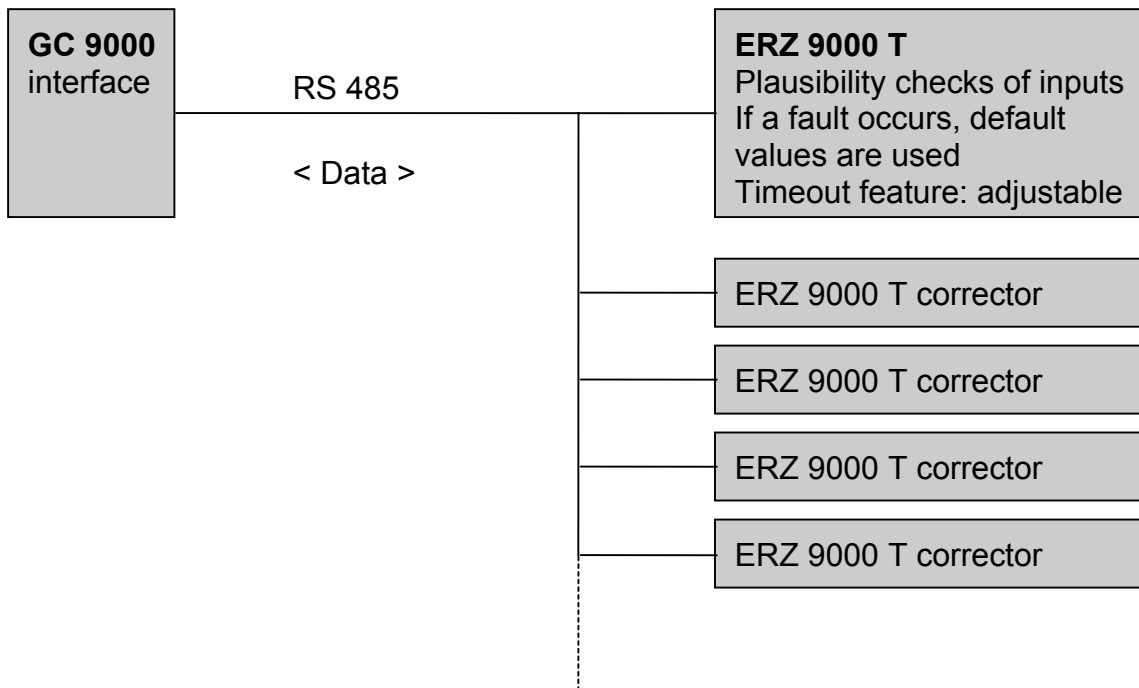

A maximum of 30 ERZ 9000 T Flow Computers can be connected to a PGC Type GC 9000. Wiring is to be made in the form of a bus network, while cable specifications must be observed.

Additional features of the GC 9000 process gas chromatograph

To activate the RMG-BUS mode

Set the mode to RMG-BUS in coordinate J 19.

Status indications

The status is indicated in coordinate J 20:

"Revision running"	Information indicated during revision
"Calibration running"	Information indicated during calibration
"Analysis running"	Information indicated during analysis
"Fault"	Information indicated while fault is pending

The status indicated flashes at 2-second intervals, but at the time the message is sent, the flashing stops for a few seconds. In this way, the time of transmission can be detected easily without any auxiliary equipment.

Additional features of the ERZ 9000 T corrector

To activate the RMG-BUS mode

Set the mode to RMG-BUS in column S under coordinate S 27. Set the baud rate, etc., in coordinates S 28 ... 30.

Status indications

The status is indicated in coordinate S 31.

"Revision running"	Information indicated during revision
"Calibration running"	Information indicated during calibration
"Analysis running"	Information indicated during analysis
"Fault"	Information indicated while fault is pending
"No connection"	Information indicated while fault is pending

The status indicated flashes at 2-second intervals, but at the time the message is received, the flashing stops for a few seconds. In this way, the time of transmission can be detected easily without any auxiliary equipment.

Data transmission / Timeout feature

Data transmission is carried out cyclically at intervals of approx. 30 seconds. Therefore, a change of status will be indicated after 30 seconds at the latest and causes a reaction with all users. The timeout feature can be adjusted by time reference (minutes), i.e. 2, 3, 4, 5, 6, ... x 30 seconds.

Electrical characteristics of the RMG-BUS

As to its electrical characteristics, the RMG measuring bus is based on the EIA RS 485 standard (differential voltage signals via a twisted pair of wires). The bus network with its regular-bus topology makes it possible to connect up to 31 users. The length of the bus may be up to 500 meters. All users are electrically isolated from each other, each interface has its own power supply unit to power the bus.

Connector pin assignment

The RMG-BUS interface has been designed as a 9-pin male Cannon connector. Refer to the following table for contact assignments.

Pin No.	Signal	Description
1	+U	Power supply (+5 VDC)
2	GND	Reference potential. Electrical isolation from the device is mandatory.
3	R/TA	Wire A of the pair of wires of the data line
4	...	not assigned
5	SGND	Reference potential, identical to GND
6	-U	Reference potential, identical to GND
7	GND	Reference potential, identical to GND
8	R/TB	Wire B of the pair of wires of the data line
9	...	not assigned


Bus termination and generation of open-circuit potential

In order to prevent distortion and reflection of signals, terminating resistors must be connected on both sides of the bus cable. These terminating resistors should correspond more or less to the wave impedance of the line with typical values between 120 and 150 ohms. In addition to the terminating resistors, there is one network necessary for the generation of open-circuit potential at least at one location (anywhere) to secure defined levels. It is to be specified that the supply of the bus will be taken over by the GC 9000 (set DIL switch) and that the terminating resistors on both sides of the bus cable will be switched on.

Cable specification

The cable comprises two pairs of wires which are twisted together and shielded in each case. The nominal cross section per wire must be at least 0.25 mm^2 , while the effective capacitance must be below 150 pF/m . The shield is to be connected at one location, preferably at the end, to an equipotential bonding strip.

Example:

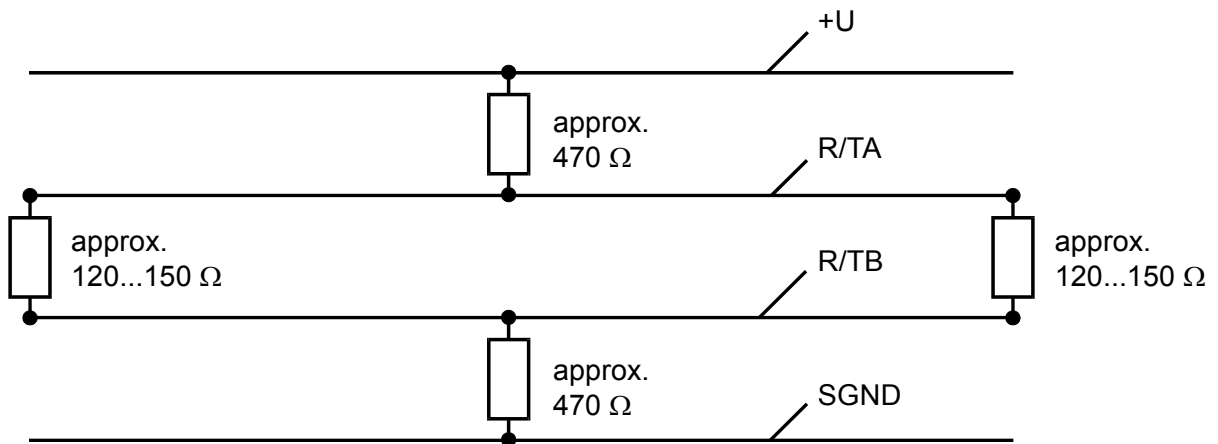


Annex G

HART master card in the ERZ 9000 T

Transmitters: Pressure, temperature
Manufacturer: e.g. Rosemount
Degree of protection: Intrinsically safe with an external transmitter supply unit

Block diagram

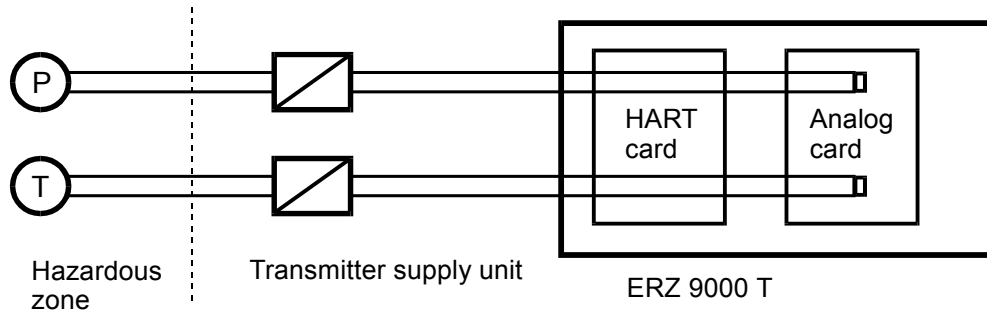

Function

The analog signals are connected to the usual terminals on the rear panel of the ERZ 9000 T. The signals are looped through the HART master card and are additionally connected to the analog card. Therefore, both measuring facilities are available.

The HART master card comprises 2 HART modems with separate functions and is always connected to the transmitters (no multiplex operation).

No operator action has to be taken via the display of the corrector, since all card functions are performed automatically. Therefore, no HART functionality is integrated into the coordinate structure of the ERZ 9000 T. Transmitter parameterization is always to be performed using the external handheld device.

The master card in the ERZ 9000 T cyclically calls the HART function 03 and expects the following measured values:

- primary variable
- secondary variable
- tertiary variable
- 4th variable
- pv current

If there is no response or another response to this inquiry, the transmitter(s) must be parameterized appropriately using the handheld device. The master card expects the device address 0.

The data acquired by both transmitters are combined and sent to the ERZ 9000 T via an internal interface link. The protocol used is based on existing solutions and is described separately.

Configuring a transmitter using the external handheld device

During or after a change in the configuration of a transmitter, it adds what is called a configuration flag to the data sent for each inquiry. This flag is recognized by the master card which signals it to the corrector and immediately gives the command to erase it in the transmitter. The corrector then initiates the "**Parameter change**" warning. After the flag has been erased in the transmitter, this message will turn to steady light if no other change is made through the handheld device.


Hardware design

Plug-in card for the ERZ 9000 T. This card is to be inserted into the free slot of the explosion-protected isolating card in the ERZ 9000 T. Coupling is made via an internal interface link (formerly FE-06).

The circuitry has been designed for P and T, but can optionally be expanded so that three or four inputs can be processed in multiplexing.

The 250 Ω resistor required for the modulation and demodulation of the digital signals is located on the master card. A relevant note should be made on the device and in its documentation, e.g. RL = 250 Ω inside.

Depiction of the mounting situation (19" rack-mounting unit, top view without cover):

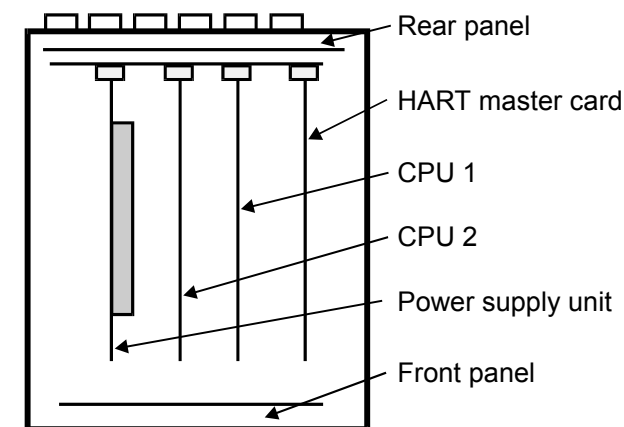

Effects on the corrector

Pressure transmitter

In column A **Pressure**, the **P-mod 1** mode in coordinate A 17 is supplemented:
OFF / 0- 20 / 4- 20 / HART.

The pressure transmitter is to be connected to the corrector as usual, i.e. either as an (Ex) d 2-wire transmitter directly supplied by the corrector or as an (Ex) i active transmitter supplied by a supply unit.

If HART mode is selected, the digital measured value, which is also used for calculation, is displayed in A 01. In addition, I (mA) is still displayed in A 03 for monitoring purposes. If the digital value fails, an alarm is tripped and the default value is used. There is no automatic changeover to the analog value. A changeover must be performed manually by changing the mode.

Resistance thermometer

In column E **Temperature**, the **T-mod 1** mode in coordinate E 17 is supplemented:
OFF / PT100 / 0- 20 / 4- 20 / HART.

If a temperature sensor is used which is either directly supplied by the corrector as an (Ex) d 2-wire transmitter or supplies 0/4 ... 20mA or HART measured values as an (Ex) i active transmitter, it must be connected to the input J 5, pins 9, 10 (I 4).

The PT 100 input at J6, pins 1,2,3,4 must be terminated with 100 Ω resistors, so that the hardware-triggered open-circuit detection feature is not operated.

If HART mode is selected, the digital measured value, which is also used for calculation, is displayed in E 01. In addition, I (mA) is still displayed in E 03 for monitoring purposes. If the digital value fails, an alarm is tripped and the default value is used. There is no automatic changeover to the analog value. A changeover must be made manually by changing the mode. Here, this means changing over to the 4-wire PT 100 input J 6.

Interfaces

In column S, coordinate S 19, the **D-mod 2** mode for the C3 interface is supplemented by HART. If the device is prepared for HART, the C3 interface at the 9-pin connector on the rear panel of the ERZ 9000 T can no longer be used. Then the data link is to be established inside the device using a ribbon cable.

Fault messages displayed by the corrector in HART mode

Warning 123:	HART Timeout	Cause: No data link
Warning 124:	Parameter change	Cause: Intervention via handheld device
Fault message 126:	Sensor-Alarm	One transmitter has set alarm bit